

PART NO. X0251 XDP WRINKLE BLACK HD GEAR REDUCTION STARTER

INSTALLATION MANUAL



X D 2 5 1

XDP WRINKLE BLACK HD GEAR REDUCTION STARTER

THANK YOU for purchasing your new XDP Wrinkle Black HD Gear Reduction Starter. If at any time you need additional assistance with installation or have questions or comments, please call our technical support department at 1-888-343-7354. You can also take advantage of our live chat at www.xtremediesel.com and connect with an XDP Performance Specialist. We hope you enjoy your new XDP Wrinkle Black HD Gear Reduction Starter and we thank you for your continued support.

PACKING LIST

CODE	DESCRIPTION	QTY	CODE	DESCRIPTION	QTY
Α	XDP Wrinkle Black HD Gear Reduction Starter	1	G		
В			Н		
С			ı		
D			J		
E			K		
F			L		

IF ANY COMPONENTS ARE MISSING, PLEASE CALL OUR TECHNICAL SUPPORT DEPARTMENT PRIOR TO INSTALLATION AT 1-888-343-7354.

REQUIRED TOOLS

5/16" Socket / Wrench	14mm Socket / Wrench	11mm Socket / Wrench
Push Pin Remover Tool		



WARRANTY INFORMATION

Products manufactured by XDP carry a 2-Year warranty against defects in materials and craftsmanship. The Warranty is Limited to two (2) years from the date of sale and limited solely to the parts contained within the product's kit.

INSTRUCTIONS



BEFORE YOU BEGIN! Before removing any parts from your truck, please compare the items you have received with the packing list provided to verify that you have everything necessary to install your new XDP Wrinkle Black HD Gear Reduction Starter. Ensure that the vehicle has not been in use and that the engine is cool to the touch. Always wear eye protection when working on any vehicle.

- Disconnect batteries.
- Remove the passenger side inner fender well by removing the plastic push pins. (Figure 1)




Disconnect terminals at starter using a 14mm socket for main b+ cable, then use a 5/16" socket or wrench on smaller terminal. Set aside for once removed. (Figure 2)



Using a 15mm socket or wrench remove the two mounting bolts for the starter. (Figure 3)



- Remove starter from the vehicle. **NOTE**: If your vehicle is equipped with an aftermarket downpipe, it may be required to remove the downpipe to front pipe v-band clamp with an 11mm socket or wrench to allow you to pull back on the downpipe for clearance.
- The starter will come out from the bottom of the vehicle, twisting and turning the starter will allow it to slide out between the frame rail and exhaust. (Figure 4)

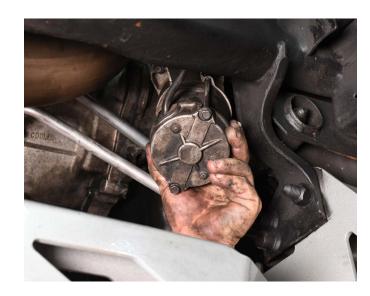

Clean all hardware in preparation to reinstall your new XDP Wrinkle Black HD Gear Reduction Starter. We do suggest using low grade Loctite (blue).

Install your new XDP Wrinkle Black HD Gear Reduction Starter and torque the mounting bolts to 58ft/lbs. After the mounting bolts are torqued you can proceed to reconnect cables to the starter and reconnect batteries. (Reconnect downpipe to exhaust if removed). (Figure 5)





RELATED PARTS



XDP WRINKLE BLACK HD HIGH OUTPUT **ALTERNATOR**

2011-2019 GM 6.6L DURAMAX



XDP WRINKLE BLACK HD HIGH OUTPUT **ALTERNATOR**

2001-2007 GM 6.6L DURAMAX



PART NO. XD351

XDP WRINKLE BLACK HD HIGH OUTPUT **ALTERNATOR**

2007.5-2010 GM 6.6L DURAMAX LMM



DON'T SEE WHAT YOU'RE LOOKING FOR? **VISIT WWW.XTREMEDIESEL.COM TO SHOP THOUSANDS** OF PARTS AND ACCESSORIES FOR YOUR DIESEL TRUCK.

