



PART NO. XD341
XDP PISTON OIL SQUIRTERS

INSTALLATION MANUAL



THANK YOU for purchasing your new XDP Piston Oil Squirters. If at any time you need additional assistance with installation or have questions or comments, please call our technical support department at 1-888-343-7354. You can also take advantage of our live chat at www.xtremediesel.com and connect with an XDP Performance Specialist. We hope you enjoy your new XDP Piston Oil Squirters and we thank you for your continued support.

CODE	DESCRIPTION	QTY
A	Piston oil squirters	6



BEFORE REMOVING ANY PARTS FROM YOUR TRUCK, PLEASE COMPARE THE ITEMS YOU HAVE RECEIVED WITH THE PACKING LIST PROVIDED TO VERIFY THAT YOU HAVE EVERYTHING NECESSARY TO INSTALL YOUR NEW XDP PISTON OIL SQUIRTERS.



BEFORE YOU BEGIN! Ensure that the vehicle has not been in use and that the engine is cool to the touch. Always wear eye protection when working on any vehicle.

- 1 Make sure the bore is cleaned with a brush.
- 2 Lube the new oiler with oil or assembly lubricant.
- 3 Use a hammer with a punch to seat the oiler plug until you feel it bottom out in the bore.