




P.O. Box 1719  
 Corona, CA 92878  
 Support: 951-493-7100  
 www.aFeFilters.com

## Intake Kit Installation Instructions: '03-'06 Dodge Ram 2500/ 3500 L6-5.9L (td)


<b>Kit Part #</b>	54-30811 51-30811 Pro Dry S 75-30811 Pro-GUARD 7	<b>Tools Required:</b>	5/16" nut driver Flat Head Screwdriver	<b>Part List:</b>	1 Air Filter Replacement P/N ( 24-40035, 72-40035 Pro-GUARD 7 or 21-40035 Pro Dry S )
<b>Make:</b>	Dodge			1 Housing	
<b>Model</b>	<b>Year</b>	<b>Engine</b>		2 Screws, 8-32 x 5/8"	
Ram 2500	'03-'06	L6-5.9L		1 Gasket (Air Temp. Sensor)	
Ram 3500	'03-'06	L6-5.9L			




**Step 1**  
 Complete kit. Make sure you have all the components listed prior to beginning your installation.

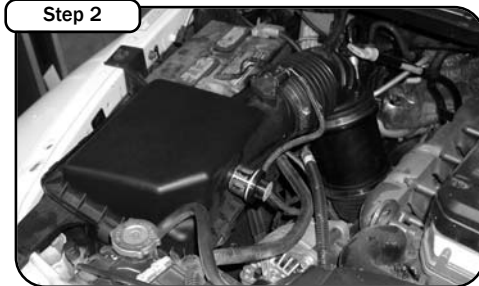


**Step 2**  
 Complete stock intake.

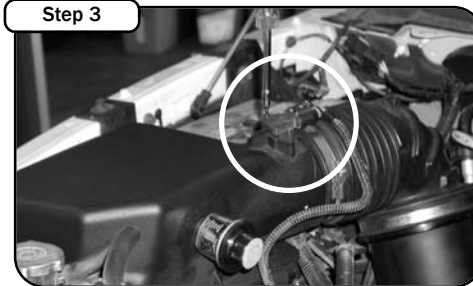

**Step 3**  
 Remove the air temp. sensor from the stock housing.

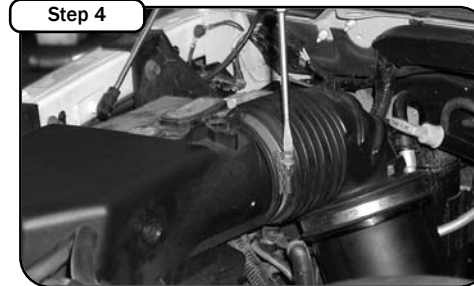

**Step 4**  
 Loosen the clamp that fastens the stock air intake tube to the housing.

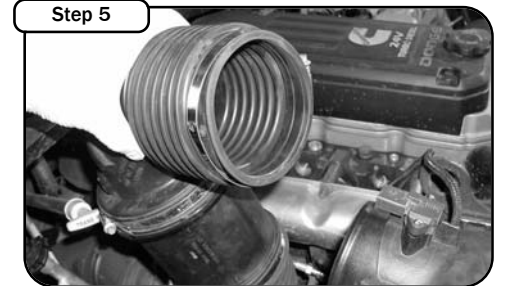


**Step 5**  
 Pull back the stock air intake tube from the housing.



**Step 6**  
 Un-clip and remove the upper air box and stock air filter.




**Step 7**  
 Make sure the alignment hinges fall into the grooves on the lower OEM air box.

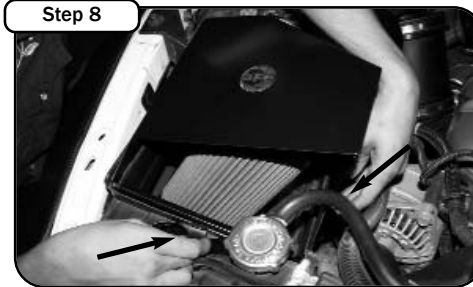


**Step 8**  
 Clamp the aFe housing using the 2 factory clips attached to the lower air box housing.



**Step 9**  
 Insert and secure the stock air intake tube onto the aFe housing.

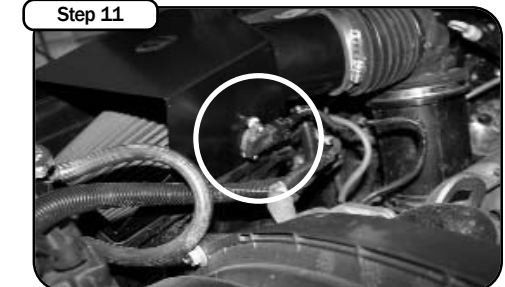

**Step 11**  
 Insert and fasten the factory air temp. sensor onto the side of the aFe housing, using the air temp. sensor gasket provided.

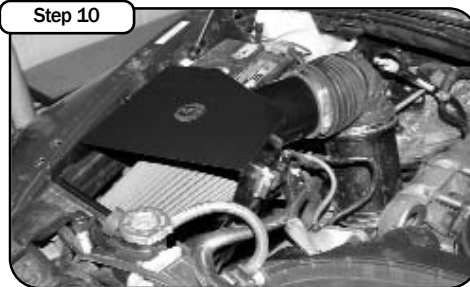


**Step 10**  
 Your installation is now complete. Make sure you tighten all clamps and check all electrical connections. Re-check periodically.

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" (aFe P/N: 90-50001 blue oil aerosol, or aFe P/N: 90-50501 blue squeeze bottle oil or aFe P/N: 90-50000 gold oil aerosol, or aFe P/N: 90-50500 gold squeeze oil).  
 Filter Replacement: Magnum FLOW P/N: 24-40035 (black w/blue media) or Pro-GUARD 7 P/N: 72-40035 (black w/gold media). **Pro Dry S** P/N 21-40035 (black w/white media) **Pro Dry S** cleaning: see cleaning instruction sheet 06-00074


# DIESEL POWER BADGE

Your system includes one "Diesel Power" logo designed to compliment your truck.  
Use the diagrams below for positioning of the logo for a clean factory look.

## TYPICAL FORD RIGHT FENDER

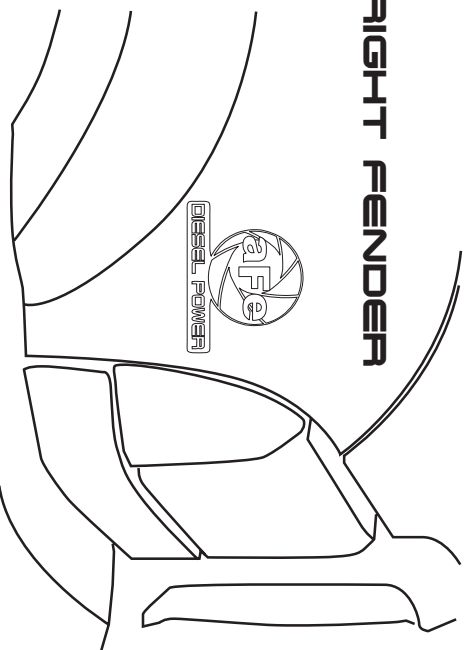

## TYPICAL RAM RIGHT FENDER

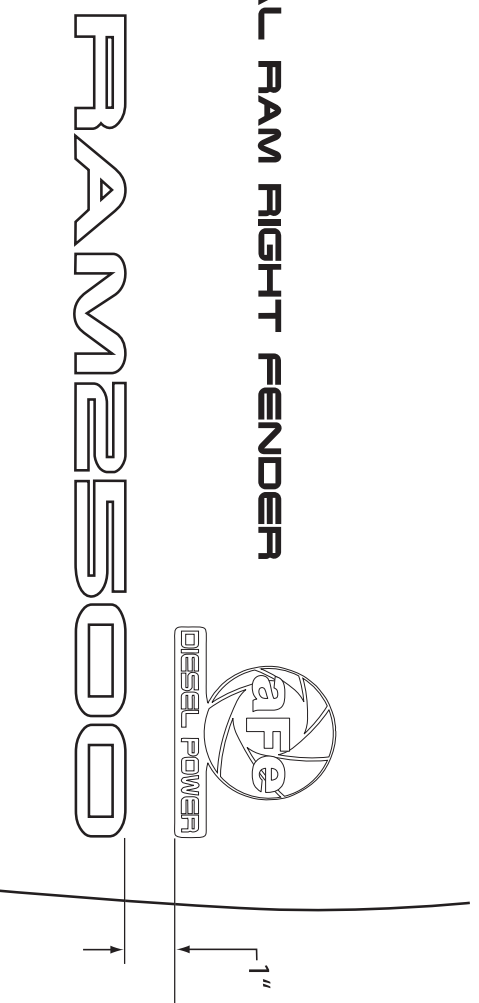

## TYPICAL GM TRUCK LEFT FENDER

