



Description: Head Light  
 Part Number: 111107-111086 -111199 - 111200  
 Application: 2007.5-2013 Chevy Silverado



Tools needed: 10mm socket,  
 8mm socket, flat head  
 screwdriver, pliers, wire splicer,  
 electrical tape.



Step 2: Remove the shroud from  
 the frame.



Step 3: Use the 10mm socket to  
 remove the 4 bolts holding in  
 the grill.



Step 7: Use the 8mm socket to  
 remove the upper screw for the  
 wheel well cover.



Step 8: Use the 10mm socket to  
 remove the two screws holding  
 in the bumper cover with the  
 bottom lip.



Step 1: Use the flat head  
 screwdriver to remove the 8  
 push pins holding in the shroud.



Step 3: Use the 10mm socket to  
 remove the 4 bolts holding in  
 the grill.



Step 5: Remove the grill from  
 the frame.



Step 7: Pull back the wheel well  
 cover to expose the three push  
 pins holding in the front bumper  
 cover



Step 8: Use the 10mm socket to  
 remove the two screws holding  
 in the bumper cover with the  
 bottom lip.



Step 4: Use the pliers to  
 squeeze the six clips holding the  
 grill.



Step 6: Use the 8mm socket to  
 remove the screw holding the  
 wheel well cover.



Step 8: Use the 10mm socket to  
 remove the two screws holding  
 in the bumper cover with the  
 bottom lip.



Step 8: Use the 10mm socket to  
 remove the two screws holding  
 in the bumper cover with the  
 bottom lip.



Step 9: Get under the vehicle under the bumper cover to remove the five 10mm screws.



Step 10: Remove the 10mm screw holding in the lip to the bumper cover.



Step 11: Unclip the three pins holding in the bumper cover and the lip.



Step 12: Pull off the bumper cover from the frame of the vehicle.



Step 13: Remove the two 10mm screws holding the headlight in place.



Step 14: Pull back the wheel well cover to remove the 10mm socket holding the headlight in place.



Step 15: Remove the headlight from the vehicle.



Step 16: Unplug the wire harness from the headlight.




Step 17: Take out the new Anzo headlight from the box.




Step 18: Locate the 2 light tan and black wire from the Anzo headlight does not matter which ones you use.



Step 19: Twist the red and blue wires together and the two blacks together from the new headlight.

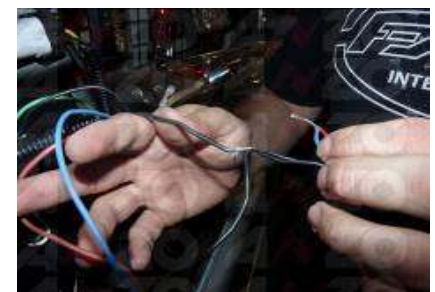

Step 20: Splice the 2 black wire with the single black wire on the back of the headlight.

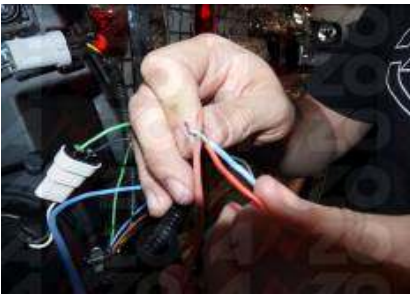

Step 21: Splice the red/blue wire to the tan wire on the back of the headlight.



Step 22: Connect the wire harness to the new Anzo headlight and reverse steps to put headlight back in place.



Step 23: Test all functions to make sure of proper installation before driving.



*AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.*