



Installation Instructions

For Part Numbers:

- 300-139 720-128 Airaid Oiled Media Filter
- 301-139 721-128 SynthaMax Dry Media Filter - Red
- 302-139 722-128 SynthaMax Dry Media Filter - Black
- 303-139 723-128 SynthaMax Dry Media Filter - Blue

**1994-02 Dodge Ram 2500/3500
5.9L I6 Cummins Diesel**

INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE AIRAID.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE.



Component Identification

1.	Airaid Premium Filter	1
2.	Front Panel	1
3.	MAF Panel	1
4.	Weather Strip 35 1/2"	1
5.	6-32x5/16" Screw	4
6.	6-32 Nut	4
7.	#6 Flat Washer	4
8.	Airaid Decal	1

Full color instructions can be viewed on our web site at Airaid.com. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

I DISCONNECT NEGATIVE (-) BATTERY CABLE

II Remove Factory Intake Assembly

- A) Unclip the factory air box lid.
- B) Loosen clamp connecting the factory air box lid to the air intake tube and remove the air box lid and factory air filter from the vehicle. (*Note: leave the factory air box base in place*) **See Fig#1**

III Airaid Intake System Pre-Installation Assembly

- A) Assemble Airaid Quick Fit cool air dam panels using the (4) 6/32 bolts, washers and nuts provided. **See Fig#2**


IV Airaid Intake System Installation

- A) Install the Airaid intake assembly in place of the factory air box. **Refer to Fig#3**
- B) Secure the factory intake tube to the Airaid cool air dam using the factory hose clamp.
- C) Mount the Airaid Premium Filter to the tube on the inside of the Airaid cool air dam and tighten the hose clamp. **Refer to Fig#3**
- D) Install weather strip onto the top ridge of the Airaid cool air dam (*Hint: start the install at the top corner of the cold air dam*) **Refer to Fig#2 & Fig#3**

V Finishing Up

- A) Inspect overall work and check hood clearance. Apply the Airaid Foil Decal onto the Panel as shown.
- B) Ensure that no foreign objects are in the intake path!
- C) Re-connect negative battery cable.

Fig#1

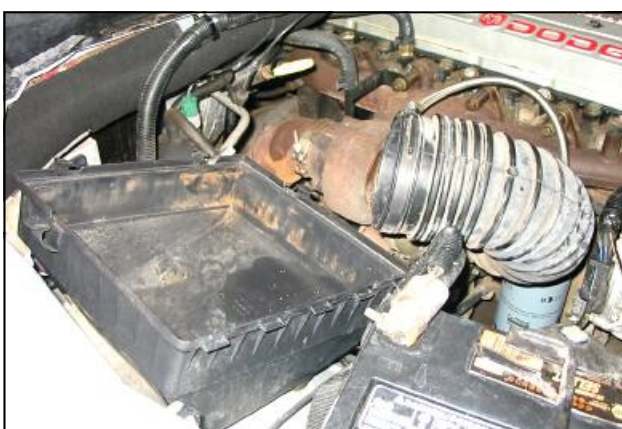

Fig#2



Fig#3



Thank you for purchasing the Airaid Intake System. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. **WATER INGESTION IS THE DRIVERS RESPONSIBILITY!** The air filter is reusable and should be cleaned periodically.

FILTER IDENTIFICATION

720-128 Airaid Oiled Media
722-128 Airaid SynthaMax Dry Media - Blue

721-128 Airaid SynthaMax Dry Media - Red
723-128 Airaid SynthaMax Dry Media - Blue

For your Oiled media filter we suggest using the AIRAID Filter Tune-Up Kit!



Do Not Oil



Synthamax Air Filters do not require oil. Service air filter as needed by cleaning with common non-petroleum all-purpose household cleaner and water. Simple Green®, Formula 409® or equivalent works great. Apply cleaner to outside of air filter and allow to soak. Then flush filter clean from the inside out with a garden hose and repeat steps if necessary. Do not apply high pressure water or air to clean filter. Allow filter to air dry and reinstall.

P/N 790-551 Aerosol Spray
P/N 790-550 Squeeze Spray



INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE AIRAID.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE.