



# aFe Power Engine Cover

PN: 54-32418

## Important!

Please read all instruction steps before you begin installation.

Make	Model	Year	Engine
Dodge/RAM	RAM 2500/3500	2013-2018	L6-6.7L (td)


**Tools Required:** 1) 3/8 End Wrench or Socket.

**Step 1.** Remove edge trim from housing.

**Step 2.** Slide the 3 panel nuts over the housing edge at the punched hole locations. The threaded portion should face the filter.

**Step 3.** Install the cover using the supplied hex screws. Do NOT over tighten.

Your install is now complete!

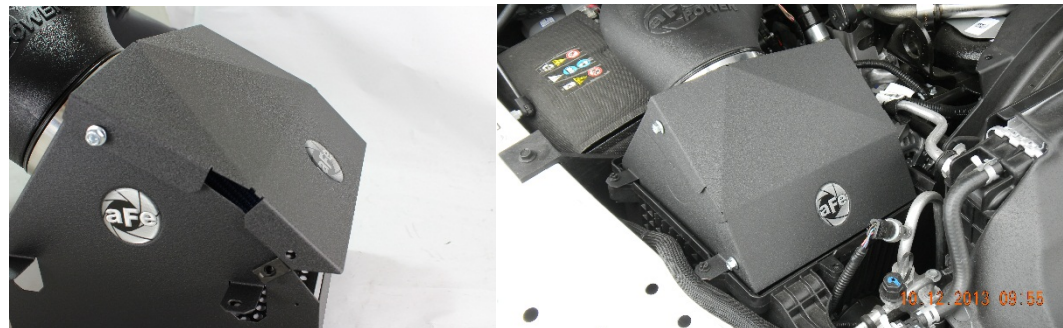

advanced FLOW engineering

252 Granite Street, Corona, CA 92879

Support: 951-493-7100

[www.aFePower.com](http://www.aFePower.com)