

THIRD BRAKE LIGHT ANTENNA ADAPTER

- 2009 - 2018 RAM 1500
- 2019 - 2024 RAM 1500 CLASSIC BODY
- 2010 - 2024 RAM 2500+3500+4500



BULLET PROOF DIESEL
.COM



P/N: 90201152

E-MAIL: SALES@BULLETPROOFDIESEL.COM | 4245 E PALM STREET MESA, AZ 85215



@BULLETPROOFDES

480.247.2331 • 888.967.6653

INSTALLATION MANUAL

REV:01082025

Introduction

Thank you for your purchase of our vehicle-specific Third Brake Light Antenna Adapter! We hope that you find the installation simple and straightforward. As our customer, your satisfaction is important to us, and for that reason we take pride in all of the products we manufacture to ensure a reliable solution for years to come.

Warranty

At Neal Technologies, Inc. we know that if we don't take care of the customer, someone else will. That is why we strive to make each and every customer experience as wonderful as possible.


With regards to our Third Brake Light Antenna Adapters, we offer a 1-Year Parts Only Warranty. The limitations include:

- Parts-only, exchange-only warranty.
- Warranty is limited to defects in workmanship and materials.
- Shipping is NOT included with warranty returns.

In the rare event that you have a warranty claim, we will be more than happy to assist you. Please call before you take action. We want to track and properly handle any warranty claims. You will need to contact our team at 888-967-6653 or 480-247-2331 so we can assist you with options and your return.

Tools Needed for Installation:

- Phillips Screw Driver

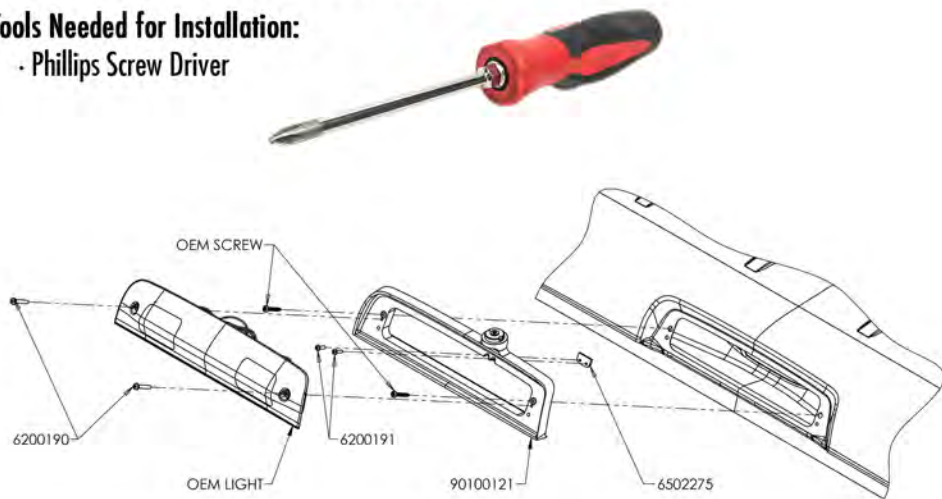

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
3	90100121	2009/2010 TO 2017 RAM ANTENNA MOUNT ASSEMBLY	1
4	6502275	RAM ANTENNA CLAMP	1
5	6200191	8-32 X 9/16" PAN HEAD PHILLIPS SCREW, 18-8 SS	2
6	6200219	10-24 X 1" PAN HEAD PHILLIPS SCREW 18-8 SS	2



1 - Use the Phillips Head Screwdriver to remove the two screws holding the brake light housing in place and pull the light away from the cab.



2 - Disconnect the wiring harness and set the brakelight housing aside.



3 - Route the cable into the cab following the brake light harness. Seat the adapter as shown with the antenna clamp on the INSIDE of the cab. Use the two OEM screws to secure the antenna adapter to the cab using factory holes.



4 - Tighten the screws on the antenna clamp until they are snug. Reconnect the wiring harness and guide the brake light housing holes to line up to the machined holes in the antenna adapter. Use the supplied screws to secure the OEM brake light housing to the Antenna Adapter.

