

Hard Tri-Fold Cover Special 2 Piece Side Rail Instructions



Special 2 Piece Side Rail Clamping Instructions for Kits with Split (2 Piece) Rails

INSTALLER: These instructions must be given to the consumer.

CONSUMER: Save this insert for future reference.

READ AND FOLLOW THESE SPECIAL INSTRUCTIONS ALONG WITH THE STANDARD INSTRUCTIONS CAREFULLY BEFORE INSTALLING OR USING THIS COVER.

Actual parts may vary from those shown in this booklet.

PREPARATION

TOOLS NEEDED

1/2" wrench

Torque wrench with 1/2" socket

Spring clamp - optional

Tape measure or ruler

Protective eyewear


Marking pen



CAUTION: Over torquing of hardware may damage components. Do not use impact tools.

NOTE: Some models may have model specific clamp instructions. Use those instructions along with these special 2 piece side rail instructions.

This clamp kit contains 10 regular clamps in which 2 clamps will be used for seam coverage.

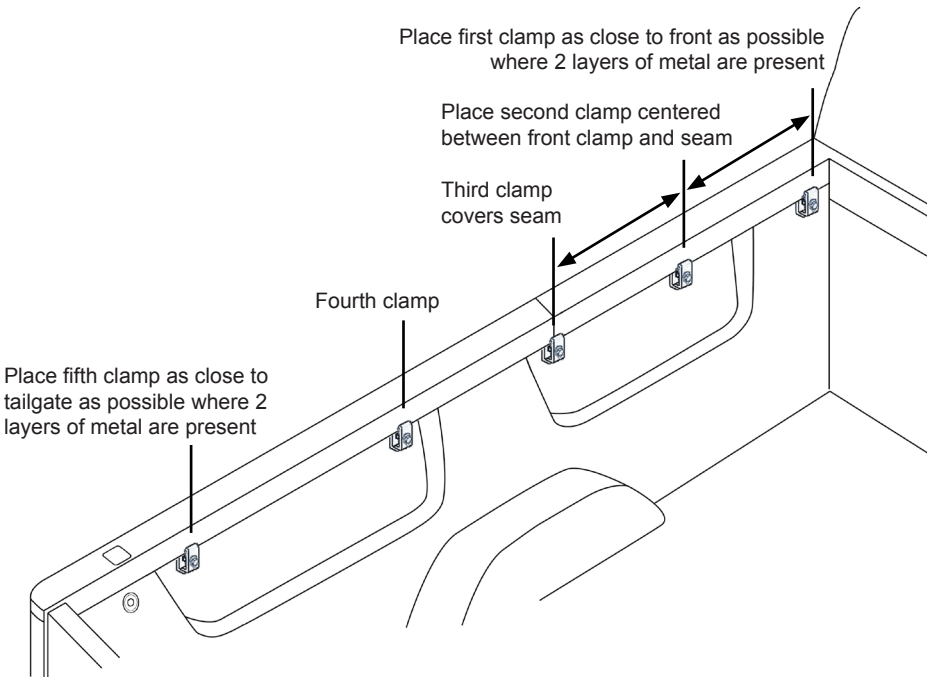

For rail installation troubleshooting, please refer to owner's manual.

1: INSTALLING COVER SIDE RAILS

A. Locate two rail sections for DRIVER'S side by finding identifying marks at middle of rail. Identify matching rail (as shown). The remaining two rail sections will be for passenger side. Arrow will point towards the truck cab.




B. Use owner's manual for the correct height and position of rail. Position first clamp as close to front as possible where 2 layers of metal are present. Tighten clamp. Center second clamp between front clamp and seam. See diagram on Page 2.

C. Position rear rail section flush with front rail. Hold with spring clamp. **The third clamp will cover the seam and the clamp face will align the two rail sections.** They must be flush with each other.

D. Place fourth clamp between seam and rear clamp location. See diagram on Page 2.

IMPORTANT: To keep rail secured on truck, ensure clamp teeth engage grooves on rail, turn nut finger tight, use wrench to finish tightening.

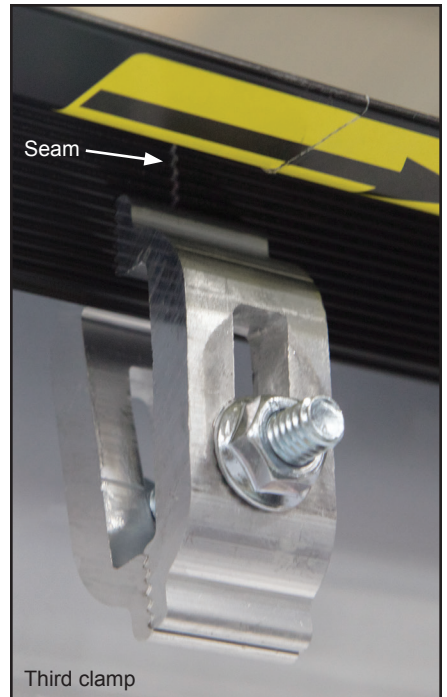

E: Place final fifth clamp at rear of box as close to tailgate as possible where 2 layers of metal are present. Always make sure clamp teeth engage grooves on rail. Repeat Step 1 to install rail on opposite side. **When done, make sure all clamps are torqued to 20 ft-lbs.**

For remaining cover installation, please refer to owner's manual.

