

CS-FEL-05 : 2005-07 Super Duty Extended Sway Bar End Links

CS-FEL-08 : 2008-10 Super Duty Extended Sway Bar End Links

CS-SBD : 2011-16 Super Duty Sway Bar Drop Brackets

NOTE:

Please review the product instructions prior to attempting installation to ensure installer is equipped with all tools and capabilities necessary to complete the product installation. We recommend thoroughly reading the instructions at least twice prior to attempting installation.

Before beginning disassembly of the vehicle, check the "What's Included" section of the instructions to ensure you've received all parts necessary to complete installation. Further, verify that the parts received are PROPER TO YOUR application (year range, motor, etc.) to avoid potential down-time in correcting potential discrepancies. Any discrepancies will be handled by Carli Suspension and the correcting products will be shipped UPS Ground.

LIFETIME PRODUCT WARRANTY

Carli Suspension provides a limited lifetime product warranty against defects in workmanship and materials from date of purchase to the original purchaser for all products produced by Carli Suspension. Parts not manufactured by, but made to Carli Suspension's specifications by third party manufacturers will carry a warranty through their respective manufacturer. (i.e. King Shocks, Bilstein Shocks, Fox Shocks). Deaver Leaf Spring's warranty will be processed by Carli Suspension.

Proof of purchase (from the original purchaser only) will be required to process any warranty claims. Carli Suspension products must be purchased for the listed Retail Price reflected by the price listed on the Carli Suspension Website at the time of purchase. Carli Suspension reserves the right to refuse warranty claims made by any customer refusing or unable to present proof of purchase, or presenting proof of purchase reflecting a price lower than Carli Suspension's Retail Price at the time the item was purchased.

Carli Suspension's Limited Lifetime Warranty excludes the following parts which are subject to wear: Track Bar Bushings, Track Bar Heim Joints, Limit Straps, Control Arm Bushings, Radius Arm Bushings, Shock Bushings, Sway Bar End Link Heim Joints, Shock Seals, Shock Bearings, and Corrosion on Shock Shafts or Bodies. These items will be warranted for a period of 60 days from the date of purchase only if determined to be installed properly signifying manufacturing defect. Carli Suspension cannot warrant a product's cosmetic finish due to the varying extreme elements that may be encountered.


Any alterations, modifications, or improper installation, of the product will void this warranty. Products should be inspected for defect upon receipt and approved before installation. Any defect in NEW product will be warranted if returned before installation in its original packaging. Carli Suspension's obligation under this warranty is limited to the repair or replacement of the defective product only. All costs of removal, installation or reinstallation, freight charges, incidental or consequential damage are expressly excluded from this warranty.

Carli Suspension is not responsible for damages and/or warranty of other vehicle parts related or non-related to the installed Carli Suspension product. This warranty shall not apply to any product that has been subjected to accident, negligence, alteration, abuse or misuse as determined by Carli Suspension. Carli Suspension reserves the right to refuse warranty claims if produced parts are combined and/or substituted with other aftermarket suspension products. Combination and/or substitution of other aftermarket suspension components may cause premature wear and/or product failure. Carli Suspension reserves the right to change/alter product without obligation to update any previously purchased products.



FOR 2005-10 VEHICLES ONLY:

1. Disconnect sway bar end links from sway bar and axle.
2. **2008-10:** Adjust supplied Carli sway bar endlinks to 7.25" C-C
2005-07: Adjust the end link so the pin is perpendicular to the mounting bracket at ride height (in the middle of travel)

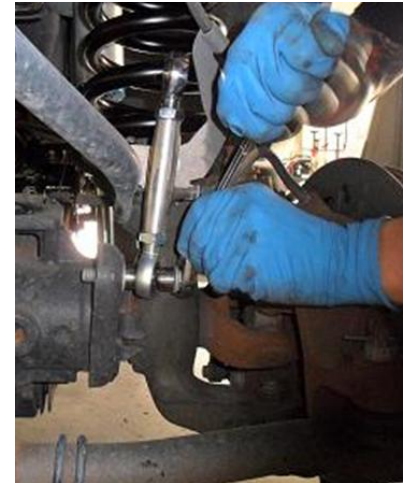

3. Install supplied Carli end links in the factory location using O.E.M mounting hardware. Tighten all sway bar hardware including jam nuts.

FOR 2011-12 VEHICLES ONLY:

4. Disconnect factory Sway Bar from the frame and install supplied Drop Brackets to the frame mount with OEM Hardware. Make sure the Drop Brackets angle forward so that it pushes the sway bar away from Coils and the non-gusseted side faces outward.
5. Reinstall Sway Bar onto Drop Bracket with supplied 3/8"x1.25" hardware. (Torque to 47ft.lbs)
6. Disconnect the lower retaining nuts on the sway bar end links from the axle bracket (both sides).
7. Push up on the passenger side of the sway bar to remove the lower pin-mount on the end link from the axle bracket.
 8. Slide the provided gold spacer onto the lower end link stud and push the sway bar back into position guiding the end link back into the axle mount



9. Re-secure the end link to the lower axle mount with the factory nut with the spacer sandwiched between the end link and axle mount. Do this hand tight until the Driver's side spacer is in place as well.
10. Repeat spacer installation on Driver's side.
11. It may be necessary to remove the thin metal "bridge" that binds the clamps on the drag-link adjustment collar to ensure full clearance of the drag link and sway bar.
12. Tighten all hardware to factory spec.