

PART NUMBER

SSF-202-47/54



BEFORE YOU BEGIN

PRIMARY APPLICATIONS


- > Chevrolet Silverado 2500 HD 4 X 2 (2011 - present)
- > Chevrolet Silverado 2500 HD 4 X 4 (2011 - present)
- > Chevrolet Silverado 3500 HD 4 X 2 (2011 - present)
- > Chevrolet Silverado 3500 HD 4 X 4 (2011 - present)
- > GMC Sierra 2500 HD 4 X 2 (2011 - present)
- > GMC Sierra 2500 HD 4 X 4 (2011 - present)
- > GMC Sierra 3500 HD 4 X 2 (2011 - present)
- > GMC Sierra 3500 HD 4 X 4 (2011 - present)

PARTS LIST

Item	Part #	Description	QTY
A	511435	SumoSprings Black -47	4
	511444	SumoSprings Yellow -54	

TOOLS REQUIRED

- > Floor Jack
- > Jack Stands
- > Wheel Chocks
- > Large Flat Head Screwdriver
- > ¾" to 1" Thick Wood Board

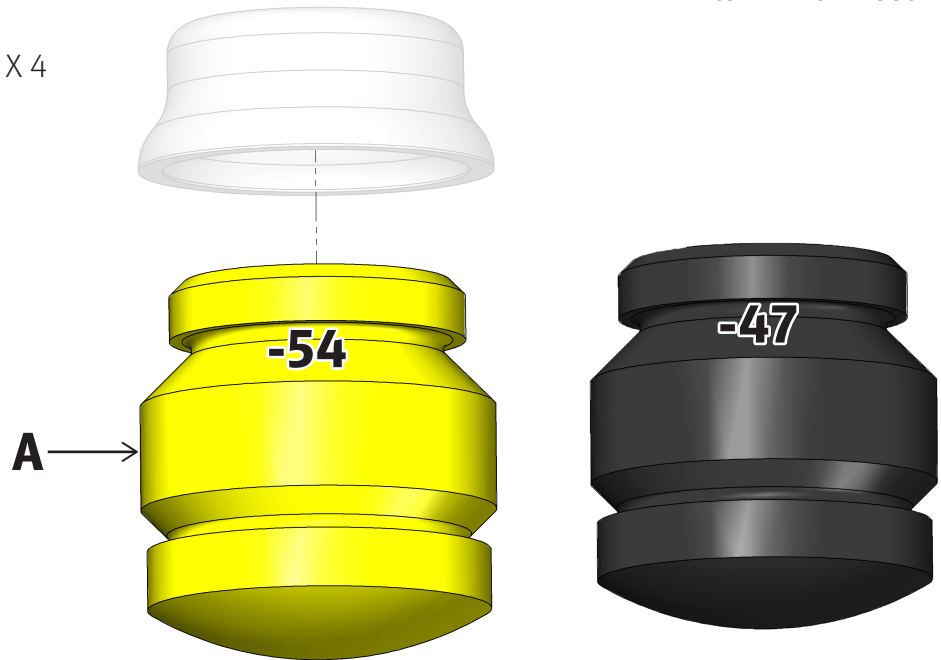

DRIVER SIDE (PASSENGER SIDE SIMILAR)

Part Number: SSF-202-47/54

Product Line: SUMOSPRINGS FRONT

Page 1

SuperSprings International, Inc.
505 Maple Avenue
Carpenteria, CA 93013

Installation Support
+1 (800) 898-0705
support@supersprings.com

superspringsint.com

SAFETY NOTICE: We recommend installation be done by a professional or persons with sound mechanical knowledge.

WARNING: These instructions are a general guide for installation. SuperSprings International, Inc. assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. **Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured.** SuperSprings' products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.

Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.

BEFORE INSTALLATION: Ensure the vehicle is on a level surface, the parking brake is ON, with the ignition OFF, and place blocks in front of and behind the front tires to prevent the vehicle from moving.

DURING AND/OR AFTER INSTALLATION: Ensure emergency brake cables are not touching the SuperSprings. Secure any cables out of the way with zip ties or by re-routing. Ensure all A/C lines, brake cables, and frame are clear of contact or interference.

REV. 2.0 | MAR 2022

PART NUMBER

SSF-202-47/54



IMPORTANT NOTICE: Your part may have been loosely preassembled to show the final product as it will be once installed on your vehicle. Please disassemble the product before proceeding to the installation.

INSTALLATION

1. Park vehicle on a hard, level surface. Engage emergency brake. Place chocks in front and behind rear wheels to prevent rolling. Observe all safety precautions and wear safety glasses.
2. Starting on the driver side, raise the front of vehicle allowing the axle to hang freely. Support the frame using safety jack stands.
3. Remove the factory bump stops by pulling/twisting out of the steel mounting cup. If needed, a large flat blade screwdriver can be used to pry them out.
4. Align SumoSprings [ITEM A] into the socket and place a ¾" to 1" thick board between contact area and the SumoSpring. Lower the jack allowing the weight of the vehicle to drive the SumoSpring into the socket. Jack vehicle up again and remove the board.
5. Repeat steps 3 through 4 on the passenger side of the vehicle.
6. Jack up vehicle, remove safety jack stands.
7. Carefully lower vehicle. Remove the chocks in front and back of the rear wheels.
8. Register the warranty for your SuperSprings International part. A warranty card can be found in the box your part came in.

Part Number: SSF-202-47/54

Product Line: SUMOSPRINGS FRONT

Page 2

SuperSprings
International, Inc.
505 Maple Avenue
Carpenteria, CA 93013

Installation Support
+1 (800) 898-0705
support@supersprings.com

superspringsint.com

SAFETY NOTICE: We recommend installation be done by a professional or persons with sound mechanical knowledge.

WARNING: These instructions are a general guide for installation. SuperSprings International, Inc. assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. **Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured.** SuperSprings' products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.

Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.

BEFORE INSTALLATION: Ensure the vehicle is on a level surface, the parking brake is ON, with the ignition OFF, and place blocks in front of and behind the front tires to prevent the vehicle from moving.

DURING AND/OR AFTER INSTALLATION: Ensure emergency brake cables are not touching the SuperSprings. Secure any cables out of the way with zip ties or by re-routing. Ensure all A/C lines, brake cables, and frame are clear of contact or interference.

REV. 2.0 | MAR 2022