

PART NUMBER


SSR-207-47



BEFORE YOU BEGIN

PRIMARY APPLICATIONS

- › Chevrolet Silverado 2500 HD 4 X 2 (2011 - present)
- › Chevrolet Silverado 2500 HD 4 X 4 (2011 - present)
- › Chevrolet Silverado 3500 HD 4 X 2 (2011 - present)
- › Chevrolet Silverado 3500 HD 4 X 4 (2011 - present)
- › GMC Sierra 2500 HD 4 X 2 (2011 - present)
- › GMC Sierra 2500 HD 4 X 4 (2011 - present)
- › GMC Sierra 3500 HD 4 X 2 (2011 - present)
- › GMC Sierra 3500 HD 4 X 4 (2011 - present)

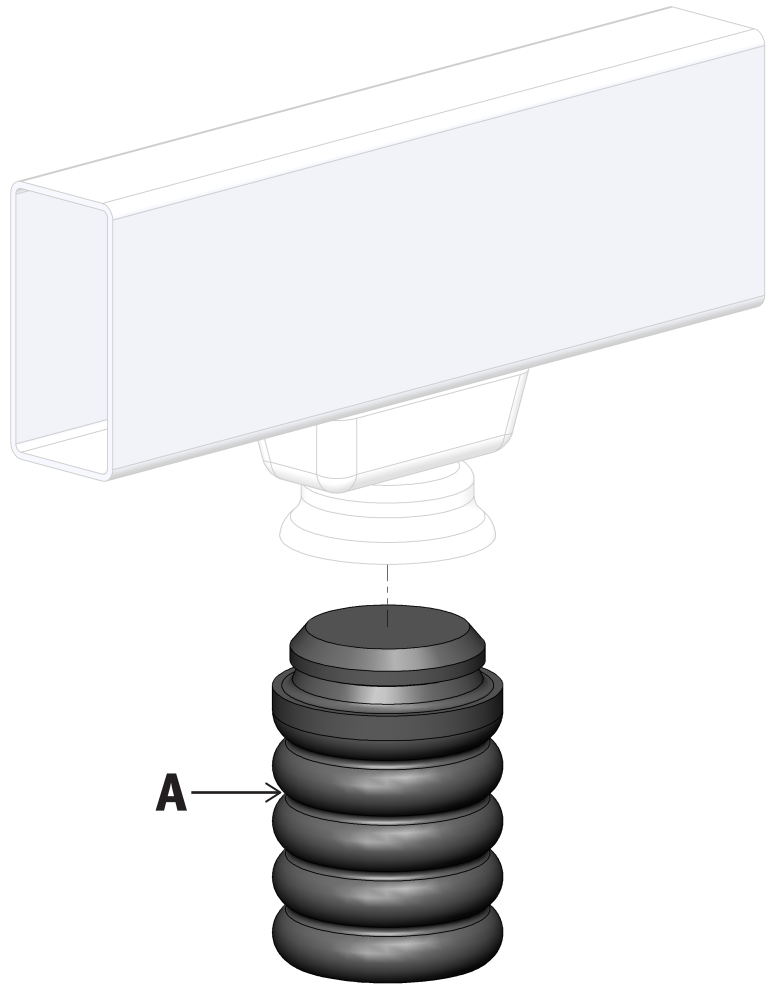

PARTS LIST

Item	Part #	Description	QTY
A	511413	SumoSprings Black -47	2

TOOLS REQUIRED

- › Floor Jack
- › Jack Stands
- › Wheel Chocks
- › 2x4 Wooden Block

DRIVER SIDE (PASSENGER SIDE SIMILAR)

Part Number: SSR-207-47

Product Line: SUMOSPRINGS REAR

Page 1

SuperSprings International, Inc.
505 Maple Avenue
Carpinteria, CA 93013

Installation Support
+1 (800) 898-0705
support@supersprings.com

superspringsint.com

SAFETY NOTICE: We recommend installation be done by a professional or persons with sound mechanical knowledge.

WARNING: These instructions are a general guide for installation. SuperSprings International, Inc. assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. **Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured.** SuperSprings' products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.

Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.

BEFORE INSTALLATION: Ensure the vehicle is on a level surface, the parking brake is ON, with the ignition OFF, and place blocks in front of and behind the front tires to prevent the vehicle from moving.

DURING AND/OR AFTER INSTALLATION: Ensure emergency brake cables are not touching the SuperSprings. Secure any cables out of the way with zip ties or by re-routing. Ensure all A/C lines, brake cables, and frame are clear of contact or interference.

REV. 2.0 | MAY 2022

PART NUMBER

SSR-207-47



IMPORTANT NOTICE: Your part may have been loosely preassembled to show the final product as it will be once installed on your vehicle. Please disassemble the product before proceeding to the installation.

INSTALLATION

1. Park the vehicle on a hard, level surface and engage the emergency brake. Place chocks in front and behind wheels to prevent rolling. Observe all safety precautions and wear safety glasses.
2. Raise rear of vehicle allowing the axle to hang freely. Support the frame using safety jack stands.
3. Starting on the driver side, remove existing factory bump stop assembly by grasping it firmly and with a twisting and pulling motion, work it until the bump stop pops out of the retaining cup. It can also be pried out of the retaining cup utilizing a large flat blade screwdriver.
4. Select a Sumospring [ITEM A] from the box and place the top plug shaped end into the retainer cup from which the factory bump stop was removed. Then in a twisting and pushing motion insert the Sumospring firmly into the retainer cup where the top edge is held into the retainer cup by the internal tangs as done on the original factory bump stop.
5. If you cannot push the SumoSpring into the cup, place a wooden 2x4 between the end of the SumoSpring and the axle, jack up the vehicle, remove safety jack stands and lower the vehicle with the jack. This will press the SumoSpring into the retaining cup.
6. Repeat steps 3 through 5 on the passenger side of the vehicle.
7. Jack up vehicle, remove safety jack stands.
8. Carefully lower vehicle to the hard surface. Remove the chocks in front and back of the rear wheels.
9. Register the warranty for your SuperSprings International part. A warranty card can be found in the box your part came in.

Part Number: SSR-207-47		Product Line: SUMOSPRINGS REAR		Page 2
<p>SuperSprings International, Inc. 505 Maple Avenue Carpenteria, CA 93013</p> <p>Installation Support +1 (800) 898-0705 support@supersprings.com</p> <p>superspringsint.com</p>	<p>SAFETY NOTICE: We recommend installation be done by a professional or persons with sound mechanical knowledge.</p> <p>WARNING: These instructions are a general guide for installation. SuperSprings International, Inc. assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured. SuperSprings' products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.</p>		<p>Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.</p> <p>BEFORE INSTALLATION: Ensure the vehicle is on a level surface, the parking brake is ON, with the ignition OFF, and place blocks in front of and behind the front tires to prevent the vehicle from moving.</p> <p>DURING AND/OR AFTER INSTALLATION: Ensure emergency brake cables are not touch-ing the SuperSprings. Secure any cables out of the way with zip ties or by re-routing. Ensure all A/C lines, brake cables, and frame are clear of contact or interference.</p>	
			REV. 2.0 MAY 2022	