



PART NO. XD347

X-TRA BRIGHT STEALTH LED BULB KIT

INSTALLATION MANUAL

X D 3 4 7

X-TRA BRIGHT STEALTH LED BULB KIT


THANK YOU for purchasing your new XDP X-TRA Bright Stealth LED Bulb Kit. If at any time you need additional assistance with installation or have questions or comments, please call our technical support department at 1-888-343-7354. You can also take advantage of our live chat at www.xtremediesel.com and connect with an XDP Performance Specialist. We hope you enjoy your new X-TRA Bright Stealth LED Bulb Kit and we thank you for your continued support.

PACKING LIST

CODE	DESCRIPTION	QTY
A	XTRA Bright Stealth LED Bulb	2
B	Power Supply	2

CODE	DESCRIPTION	QTY
C	Wiring Harness	2

IF ANY COMPONENTS ARE MISSING, PLEASE CALL OUR TECHNICAL SUPPORT DEPARTMENT PRIOR TO INSTALLATION AT 1-888-343-7354.

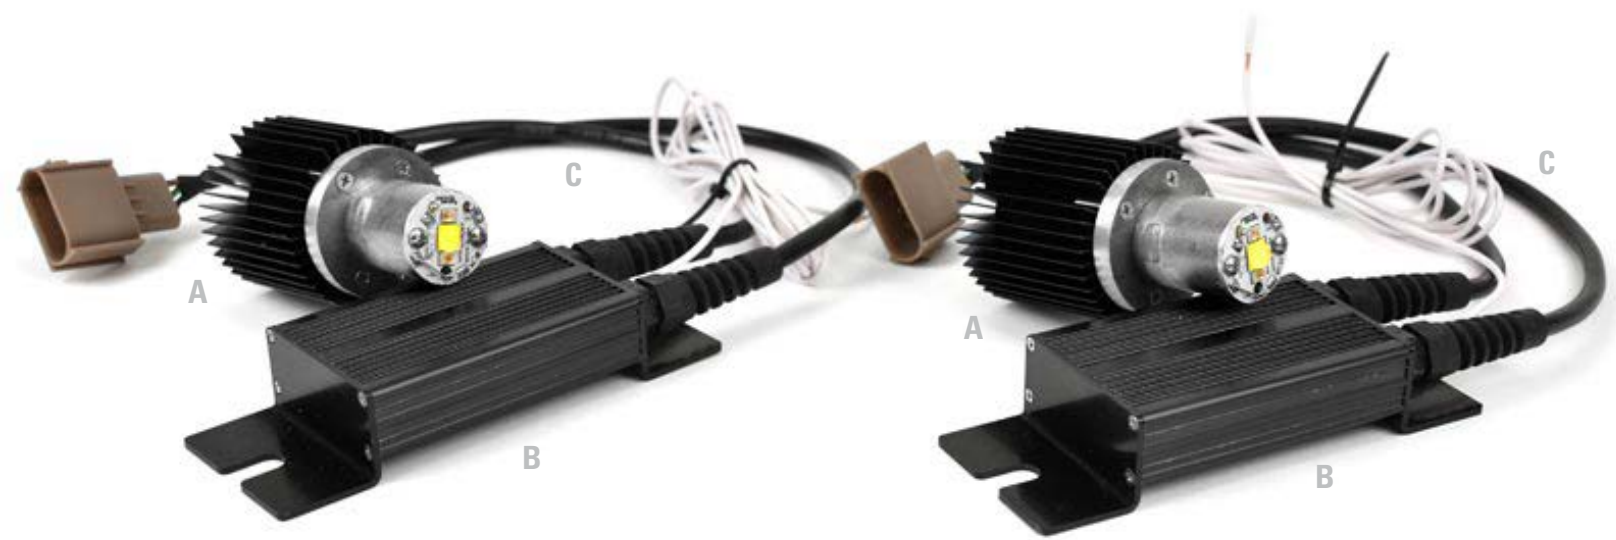

WARRANTY INFORMATION

Products manufactured by XDP carry a 1-Year warranty against defects in materials and craftsmanship. The Warranty is Limited to one (1) year from the date of sale and limited solely to the parts contained within the product's kit.



BEFORE REMOVING ANY PARTS FROM YOUR TRUCK, PLEASE COMPARE THE ITEMS YOU HAVE RECEIVED WITH THE PACKING LIST PROVIDED TO VERIFY THAT YOU HAVE EVERYTHING NECESSARY TO INSTALL YOUR NEW XDP X-TRA BRIGHT STEALTH LED BULB KIT.



BEFORE YOU BEGIN! Ensure that the vehicle has not been in use and that the engine is cool to the touch. Always wear eye protection when working on any vehicle.

1 Disconnect the battery before attempting any electrical work.

2 Remove the grille assembly by removing the 4 bolts located on the top of the grille.



3 Pull the grille forward about 6 inches, allowing access to the headlight mounting screws.



4 Remove the 4 headlight mounting bolts. (1 - Top, 2 - Side, 1 - Bottom)



5 Remove the headlight assembly from vehicle.

6 Locate the parking light bulb (top) and turn counter-clockwise to remove it from the housing.



7 Disconnect the bulb and connector from the OEM harness connector.



8 Apply dielectric grease to the end of the connector and install the XDP X-TRA Bright Stealth Bulb connector into the OEM harness.



9 Install the X-TRA Bright Stealth bulb into the housing by aligning the slots and tabs, inserting the bulb and turning clockwise.



10 Find a mounting location of your choice and secure the power supply to an available surface.

11 Route the white wires from each power supply to a 12 volt switch of your choice.

Tip: On the floor of the driver's side foot well, under the carpet, there is an access grommet to route the wires into the cab.




12 Reconnect the battery and test the functionality of the bulbs.

Note: Be sure to check the parking lights, both turn signals, and then turn on the switch to test the XDP X-TRA Bright Stealth Bulbs. Troubleshoot where necessary.

13 Re-install the headlight assembly using the 4 headlight mounting bolts removed in step 4.

14 Re-install the grille assembly using the bolts removed in step 2.

15 Installation complete.

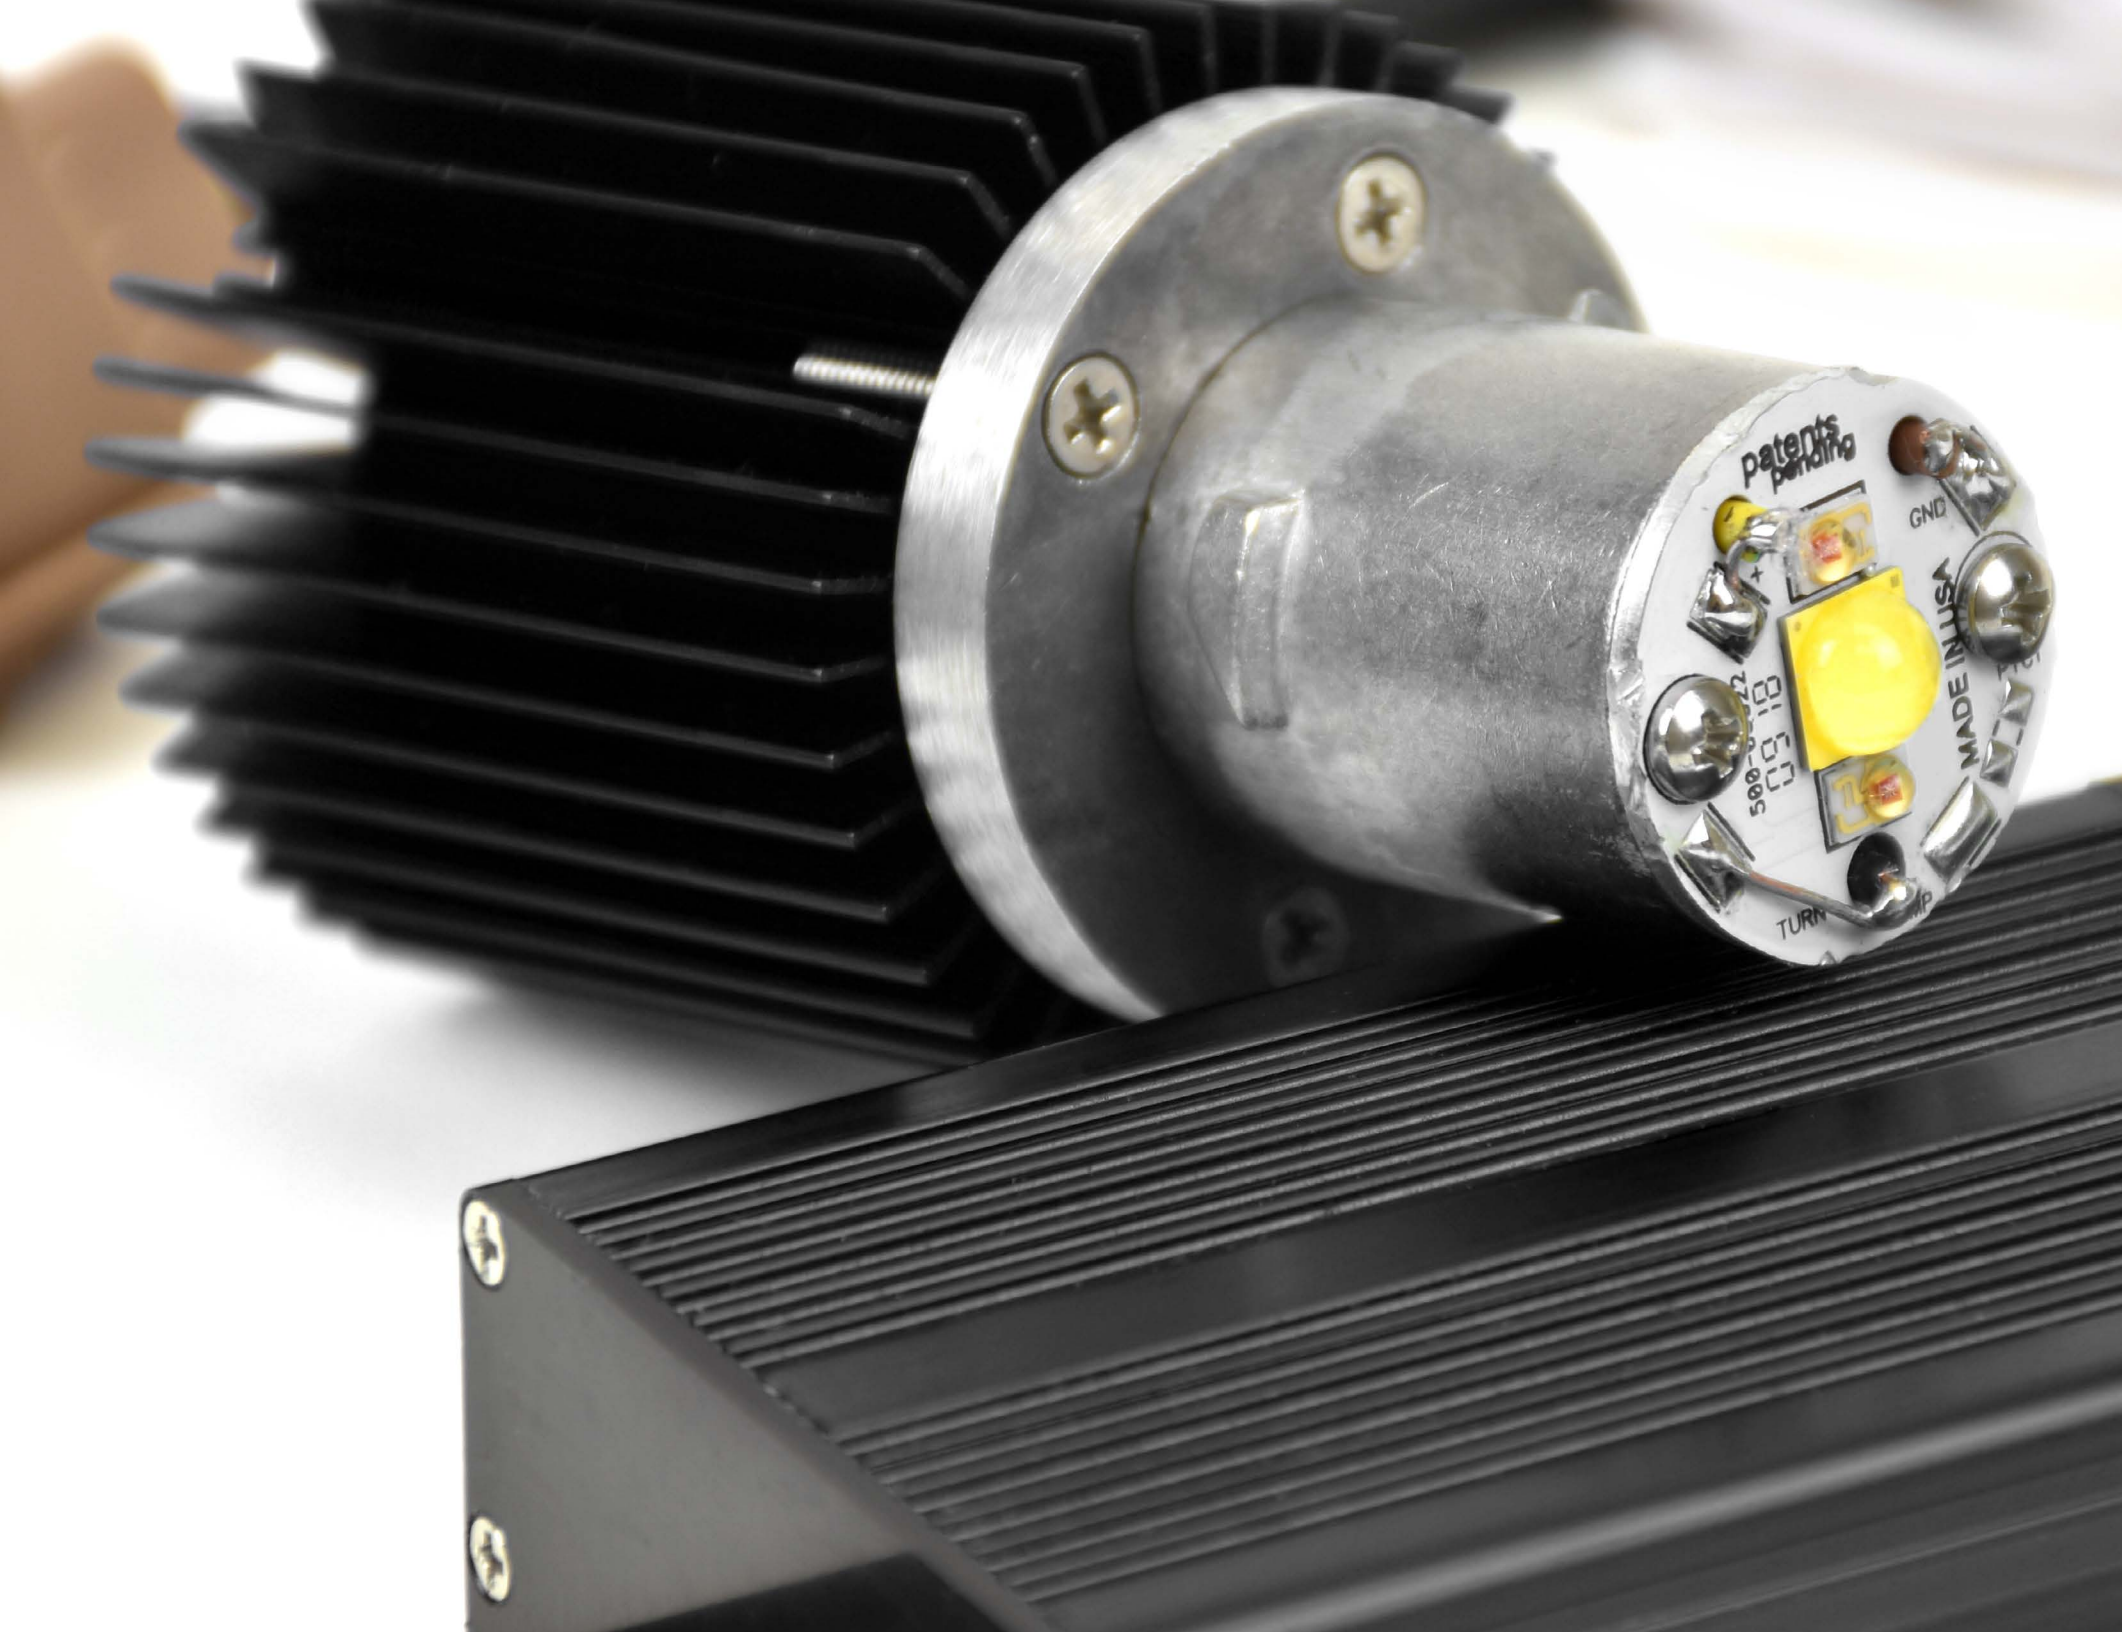

RELATED PARTS



PART NO. 5070272

SPYDER BLACK PROJECTOR HEADLIGHTS

2011-2016 FORD SUPER DUTY



PART NO. 111291

ANZO CHROME U-BAR HEADLIGHTS

2011-2016 FORD SUPER DUTY



PART NO. 264272BKCC

RECON SMOKED PROJECTOR HEADLIGHTS

2011-2016 FORD SUPER DUTY



DON'T SEE WHAT YOU'RE LOOKING FOR?
VISIT WWW.XTREMEDIESEL.COM TO SHOP THOUSANDS
OF PARTS AND ACCESSORIES FOR YOUR DIESEL TRUCK.



FOR MORE INFORMATION CALL US AT 1-888-DIESEL-4 OR VISIT WWW.XDP.COM

V1 | 092519