



XTRA COOL RADIATOR INSTALL GUIDE

INSTALLATION

These instructions are provided as supplementary information to the factory service manual instructions for radiator replacement.

1. Drain engine coolant.
2. Remove any hoses and components connected to the radiator.
3. Remove radiator from vehicle.
4. Install new radiator.
5. Re-install any hoses and components that were removed in step 2.
6. Re-fill engine coolant to factory specs and bleed cooling system of any air.

FREQUENT QUESTIONS

Why is the XDP X-TRA Cool Radiator better than the factory one?


Some features that make our radiators better are that we use high efficiency cores which offer more fins per inch and heavy-duty tubes. They also offer upgraded mounting points and end tank attachment compared to the factory design.

Are any modifications needed to install your radiator?

No, our radiators are a direct fit replacement for your stock one.

What else should I replace while changing my radiator?

While changing your radiator it would be a good time to address some other components of your cooling system such as your water pump, radiator hoses, and thermostat(s). In most cases you would need to drain some, or all, of your coolant to replace these items so now may be a good time to do so.

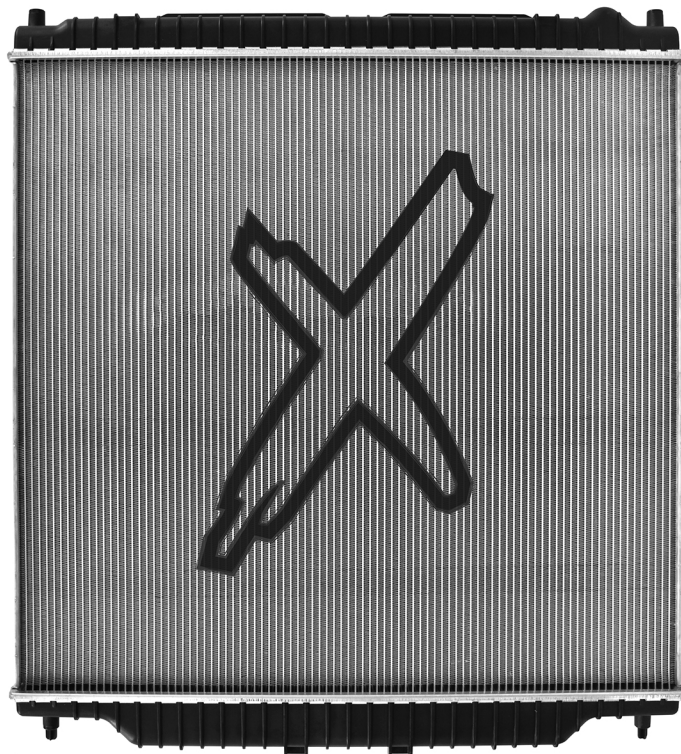

WARRANTY

WARRANTY

Products manufactured by XDP carry a 2-Year Unlimited Mileage warranty against defects in materials and craftsmanship. The Warranty is Limited to two (2) years from the date of sale and limited solely to the parts contained within the product's kit. All products that are in question of Warranty must be returned shipping prepaid to XDP and must be accompanied by a dated proof of purchase receipt. Warranty is limited to the original purchaser.

FOR MOST DIESEL APPLICATIONS

POWERSTROKE

- XD463 - 2017-2024 Ford 6.7L Powerstroke (Main)
- XD467 - 2017-2022 Ford 6.7L Powerstroke (Secondary)
- XD291 - 2011-2016 Ford 6.7L Powerstroke (Main)
- XD299 - 2011-2016 Ford 6.7L Powerstroke (Secondary)
- XD290 - 2008-2010 Ford 6.4L Powerstroke
- XD298 - 2003-2007 Ford 6.0L Powerstroke
- XD538 - 1999-2003 Ford 7.3L Powerstroke
- XD468 - 1995-1997 Ford 7.3L Powerstroke

DURAMAX

- XD292 - 2011-2016 GM 6.6L Duramax
- XD297 - 2006-2010 GM 6.6L Duramax
- XD295 - 2001-2005 GM 6.6L Duramax

CUMMINS

- XD466 - 2013-2015 Dodge 6.7L Cummins (Secondary)
- XD296 - 2003-2009 Dodge 5.9L/6.7L Cummins
- XD293 - 2010-2012 Dodge 6.7L Cummins
- XD294 - 2013-2018 Dodge 6.7L Cummins

FOR MORE INFORMATION VISIT XDP.COM OR CALL US AT 1-888-343-7354