



FUEL PUMP SERIES

FA D07 095G or FA D07 165G

LIMITED LIFETIME WARRANTY

SERIAL NO:

Provide your pump's serial #



MANUFACTURED DATE:

WARRANTY STIPULATIONS:

- Copy of sales receipt mailed with this form
- All warranty information, located on the front & back, filled out
- FASS products and/or paperwork must not be tampered with
- Warranties are non-transferable
- Warranty is only available if purchased through FASS ViP Dealer! There is "NO Warranty" on FASS Products purchased through unauthorized dealers.
- Warranty Registration must be received by FASS within 30 days of purchase.

Register online @
www.FASSride.com

SEND CORRESPONDENCE TO:

FASS Fuel Systems
Attn: Warranty
16234 State Hwy O,
Marthasville, MO. 63357
techsupport@fassride.com

DPP INC. OFFICE USE ONLY :

Date Received: _____

Purchase Receipt: Yes (Receipt Date: _____)

No

Dealer Purchased From :

Date:

New FASS Owner Name:

Company/Organization:

Phone:

Email:

Street:

City, State & Zip:

Vehicle Year/ Make/ Model:

Color:

Vin Number:

Quality Of Product

Excellent

Good

Fair

Poor

How did you hear about us?

Dealer _____ Magazine _____

Show _____ Online _____ Friend

Comments:

INSTALLATION MANUAL

ADJ FUEL PUMP SERIES



APPLICATION:

FA D07 095G (95GPH @ 16-18psi)
FA D07 165G (165GPH @ 16-18psi)

Cummins 5.9L/6.7L 24 Valve
Standard Pickup Truck
2005-2009

1998.5-2004 with In-tank Pump Modification
2003-2004 must order FP-1001 Fuel Plate



PICKUP

FASS[®]

Diesel Fuel Systems

ENGINEERED EXCELLENCE

Dear Valued Customer,

“Made in the USA” is not just a slogan at FASS; it’s what we live by! FASS is not only assembled in the USA but 98%+ of the FASS product is manufactured in the USA, helping to employ Americans and strengthen America. At FASS, we scrutinize our suppliers and demand the highest quality American-made components. However, this does come at a price, which is one of the main reasons FASS products are more expensive than the competition. Remember price does not dictate quality but quality does dictate price! Here at FASS, we believe it’s worth the commitment and will continue this practice to support America! Our competition is doing exactly the opposite by using foreign-made components.

Building extremely “High-Quality” fuel products is our business. We concentrate all of our efforts in this arena. No one else is as specialized as FASS in what we do! This is one of the ingredients to insure you are running with the “Highest-Quality” fuel system in the world! We have implemented very rigorous testing procedures to provide the “Highest Quality” we have become known for. Not only is our product superior, but customer satisfaction is #1 at FASS. It is our goal to provide the best service possible. Our confidence is evident in the products we make as each product is backed by an industry leading warranty!

Our R & D department, in conjunction with our Dealer Support department, is continually searching for ways to improve quality, expand our product line, and provide superb support to our network of dealers so our customers’ needs and expectations will be exceeded.

To help insure you receive the proper system and customer support at the local level, FASS has a VIP and Authorized Dealer network representing FASS products. This is one reason you must purchase through a dealer to comply with our warranty policies. **If you do not, there is no warranty!** We recommend you go to www.FASSride.com, click “Find A Dealer”, put in their ZIP code, select the type of dealer, and see if the company you purchased from is listed. If they are not, put their phone number in the field below the ZIP code field to see if they are listed. Below these two fields is a list of “Terminated/Unauthorized” dealers. You may want to review this list. If the company is not listed or is on the “Terminated/Unauthorized” list, we suggest you return the product immediately to that dealer and call FASS. We’ll recommend you to the nearest dealer.

VERY IMPORTANT: Make sure to fill out your product registration form and return the original form to FASS Fuel Systems within 30 days of purchase accompanied with a copy of the purchase receipt. Complying with these guidelines will qualify you for the Extended Warranty!

See the back of Install manual for full Limitations of Warranty. In the event that the buyer does not agree with this agreement: the buyer may promptly return this product, in a new and unused condition, with a dated receipt, to the place of purchase within thirty (30) days from date of purchase for a full refund less shipping.


The installation of this product indicates that the buyer has read and understands the Limitation of Warranty agreement and accepts its terms and conditions.

!WARNINGS!

- Read all instructions before starting installation of this product!
- Installing the improper FASS Pump can cause *severe* engine damage.

FASS	Recommended Application
FA D07 095G	Cummins (24 Valve) 2005-2009 with stock - moderate horsepower modifications
FA D07 165G	Cummins (24 Valve) 2005-2009 with moderate - extreme horsepower modifications

- Secure vehicle from **ROLLING!**
- Use caution when drilling. Steer clear of any electrical wires , air lines or other damageable components.
- Consult vehicle's manufacturers' instructions concerning the electrical system before attempting any electrical connections.
- Be sure that the serial # on this installation manual matches that of the outside of the box.

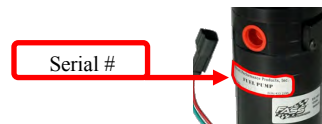

- Flush and clean all brass fittings and fuel line from debris.
- Keep debris from entering the internals of the system during installation. Getting debris in the "T" port can lock up the motor. If the motor does lock up from debris call FASS for technical assistance.



- Be sure to utilize the inline fuel filter included in this kit, or the equivalent, to prevent a motor lock up.
- Wear safety glasses when operating power tools such as drills and grinders or when using a punch or chisel.
- Properly secure lines to prevent chaffing.

BEFORE STARTING THE INSTALLATION PROCESS LUBRICATE THE BED BOLT WITH WD-40 TO HELP WITH INSTALLATION

INSTALLATION MANUAL

Follow these steps to ensure a simple installation of your new FASS ADJUSTABLE FUEL PUMP

1. *Read the installation manual completely before attempting installation. The installation of this product indicates that the buyer has read and understands the limitations of the FASS manufacturers warranty agreement and accepts the responsibility of its terms and conditions.*
2. Inventory the package components. Notify the place of purchase immediately of any parts missing or damaged.
3. The installation recommendations contained herein are guidelines. Use good judgment and take into consideration your vehicles' accessories.
4. For best results in accuracy and efficiency (due to training, communication, and our relationship with our dealer network), we recommend a ViP FASS dealer for the installation. They are prepared to install the FASS fuel pumps with the most efficiency. If a situation/problem arises during the installation, they are the most prepared for that situation/problem. DPPI is not responsible for any installation mistakes.
5. If you have any questions or concerns that can not be addressed with your dealer, email or call FASS.
6. If any installation procedure is uncertain, contact FASS technical support.

Email techsupport@FASSride.com with the following information:

- Your Name, address and daytime phone number
- Model (**FA D07 095G or FA D07 165G**)
- Serial Number
- Last 6 of vehicles' VIN
- Date of purchase
- Nature of Your Concern

Call customer service; [636-433-5410](tel:636-433-5410) with the following information:


- Model (**FA D07 095G or FA D07 165G**)
- Serial Number
- Last 6 of vehicles' VIN
- Date of purchase



ADJUSTABLE FUEL PUMP SERIES

**95 OR 165 GPH
16-18 PSI (APPROXIMATELY)**

A fuel pressure gauge is highly recommended to identify fuel filter life and to prevent engine damage!

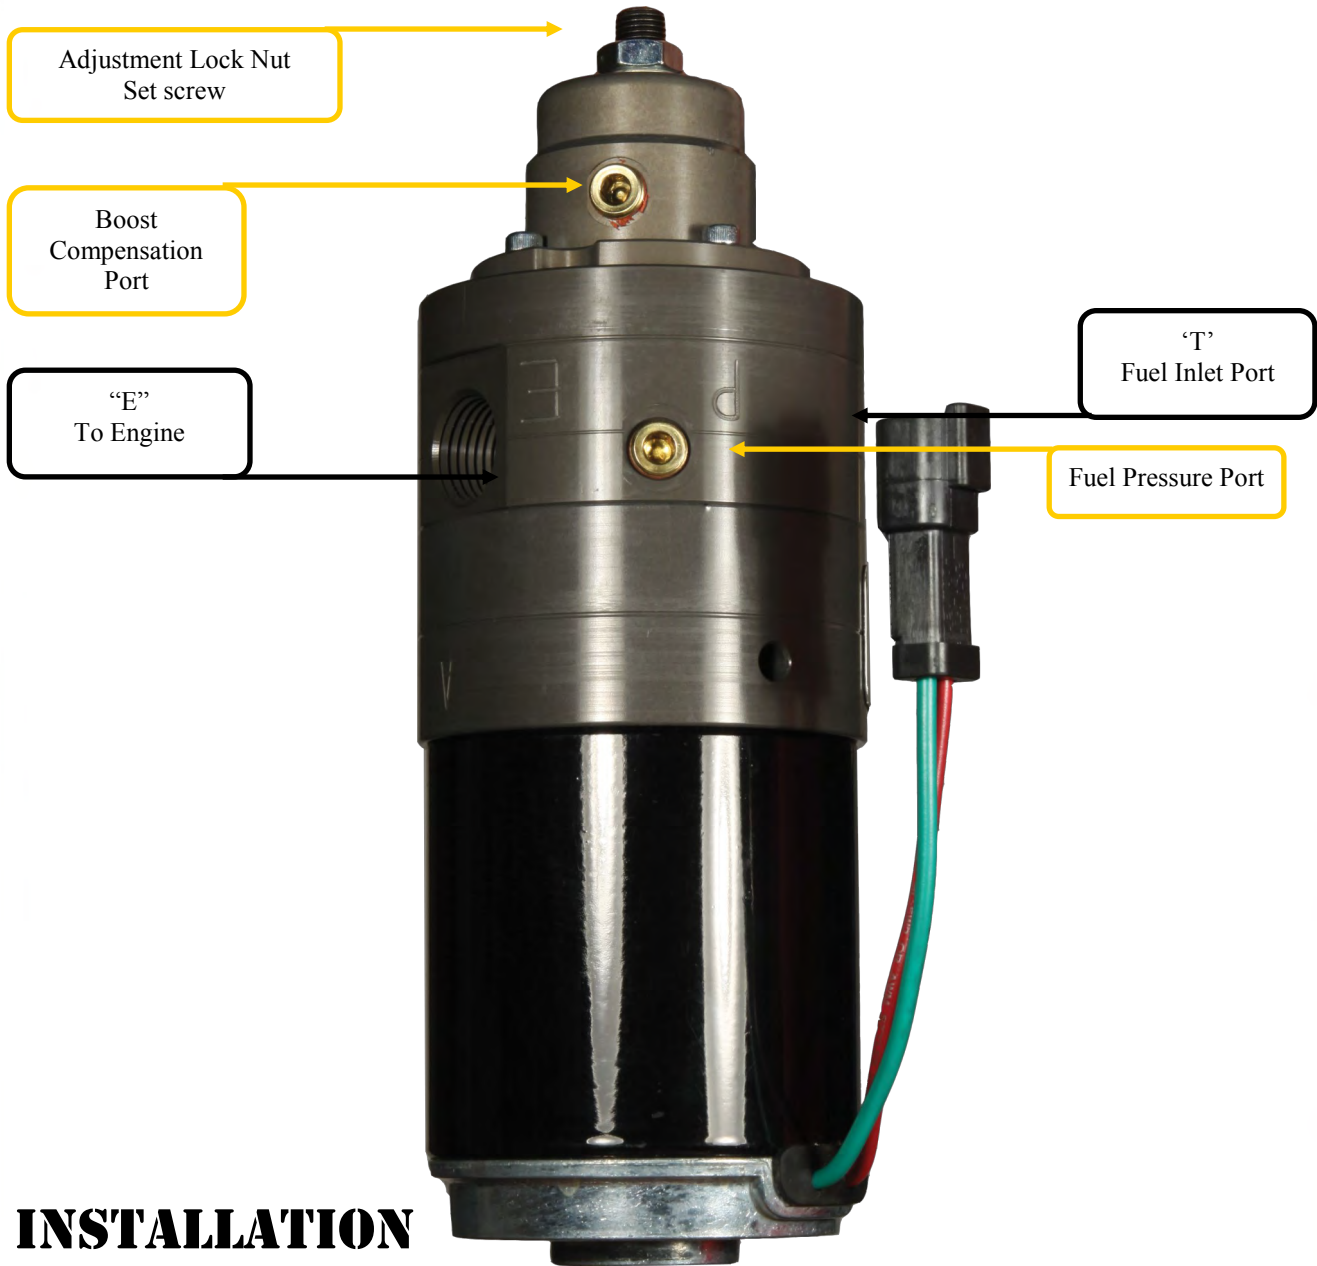

INSTALLATION

- Step 1: Install Electrical Harness
- Step 2: Prepare Suction Line
- Step 3: Mount Fuel System
- Step 4: Install Fuel Line
- Step 5: Check/Set Pressure
- Step 6: Check Installation

CONTENTS



FF-3248



FAB-1001



FPB-2005



FL-1002 x14'



WH-1004

MOUNTING PACKAGE CONTENTS



Cable Ties



ST-1005Px16"



RS-1002



BHF-1002



DIPF-1003



PL-2003



PL-1005



10-300



Ring Terminal



PL-1004



BHN-1001



LW-1001




OR-223



HC-1001



1/2" Plug

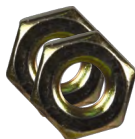

1/4" Nut



1/4" washer



2 1/4 - 20x0.75"



RS-2001




2 1/4 - 20x1.5"

Before starting installation please review contents page to insure all necessary parts are included. Please call Diesel Performance Products for any missing or incorrect items. 636-433-5410

STEP 1: INSTALLING ELECTRICAL HARNESS

The installation of the electrical harness is done first, allowing power to be applied to the pump for lubrication purposes later in the installation.

- A. Using ring terminals, attach red wire of the WH-1004 to the positive battery terminal. Attach green wire to a clean ground, preferably the negative battery terminal. Secure fuse block in a location protected from outside elements. **The use of corrosion preventative spray is recommended.**

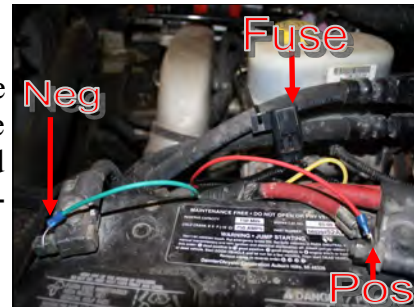

- B. Secure Relay in an upright position, as shown, to prevent moisture from entering. Di-electric grease may be applied to prevent corrosion. Examples of locations to secure relay:



- C. Route wire harness along frame to the approximate mounting location near the fuel tank. **Completion of this step will be addressed in the Step 3.**

Before starting installation please review contents page to insure all necessary parts are included. Please call Diesel Performance Products for any missing or incorrect items. 636-433-5410

STEP 2: PREPARE SUCTION & RETURN LINES


Some of the photo's are of a different application, procedures are the same.

NOTE: Before installing fittings make sure to inspect for burrs or flare imperfections. When cutting fuel line make sure to blow out line to keep debris from moving forward.


- A. Before tank is removed or moved, identify ALL areas of clearance between the tank and the truck's bed for the best location to install the BHF assembly. With proper clearance, you want to install it as close to the Fuel sending unit as possible.



- B. Remove the filler neck and overflow tubes from the truck by loosening the clamps at both ends.

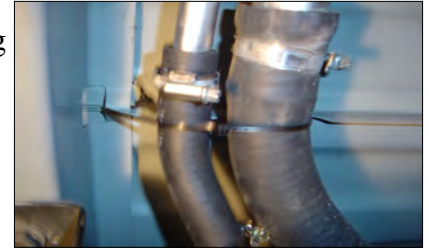

- C. Disconnect the factory suction and return line. The factory lines are removed by pressing in on the two tabs located in the connecting fuel line. Keep the tab on the factory fuel lines.

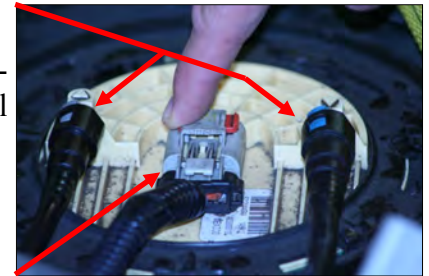

- D. Disconnect the factory electrical harness on top of the fuel tank.

- E. With the fuel tank empty of fuel, remove it from the vehicle.



- F. Clean the fuel module area then remove the lock ring on the top of the fuel tank.

- G. Once the lock ring is removed, remove pick up module from fuel tank.



NOTE: Hose clamps are not recommended for push lock fittings. They will hold up to 300psi! Use oil on fittings and inside fuel line when installing Push-Lok fittings

Before starting installation please review contents page to insure all necessary parts are included. Please call Diesel Performance Products for any missing or incorrect items. 636-433-5410

STEP 2: PREPARE SUCTION AND RETURN LINES

- H. Assemble the BHF-1002 with the PL-1004 in port "S", the 1/2" plug in port 'R'. Torque to 20 ft/lbs. Push the ST-1005P onto the barb portion of the BHF-1002. Insert O-ring into groove. ****THESE FITTINGS ARE EQUIPPED WITH THREAD SEALANT****



- I. Before drilling marked location, clean area of debris. Using the photo double and check area selected for any interference including the fuel level arm.



- J. Drill a 1 3/8" hole, catching all debris. De-bur hole and remove any missed debris in the fuel tank.



- K. **VERY IMPORTANT:** Support fuel tank on both ends allowing the natural formation of the tank to take place. Failure to perform this step can and will create an issue with less usable fuel!



- L. Place the bulk head assembly into the drilled hole, take measurements so the bottom of the suction tube is only 1/8" (no more than 2 quarters stacked) from the bottom of the fuel tank. Using a razor knife, make multiple cuts to insure proper length, it is easy to shave the suction tube with the razor.



- M. With proper length being obtained, place the assembly into the drilled hole securing the assembly using the lock washer & nut. Tighten Nut. Loctite may be applied to the threads of the BHF-1002 for added insurance.



- N. Carefully reinstall install pick up module making sure the leveling arm is not obstructed by the suction tube. Reinstall factory lock ring.



Before starting installation please review contents page to insure all necessary parts are included. Please call Diesel Performance Products for any missing or incorrect items. 636-433-5410

STEP 2: PREPARE SUCTION LINE

- O. Attach both end of the FL-1002 to the Push-Lok fittings of the BHF-1002. Remember to oil the fitting and fuel line. Route fuel line over frame rail when reinstalling fuel tank.



- P. Raise tank to reconnect factory hoses. Connect WH-1004 (addressed in Step 1) to the fuel module along with the factory fuel lines



- Q. Connect factory wire harness to the WH-1004.


- R. Re-install tank. Torque tank hanger bolts to proper specifications. Reattach filler neck and clamps.



Before starting installation please review contents page to insure all necessary parts are included. Please call Diesel Performance Products for any missing or incorrect items. 636-433-5410

STEP 3: MOUNT FUEL PUMP

A. Locate bed bolt and remove the bolt. Position RS-2001 between FPB-2005 and truck bed.

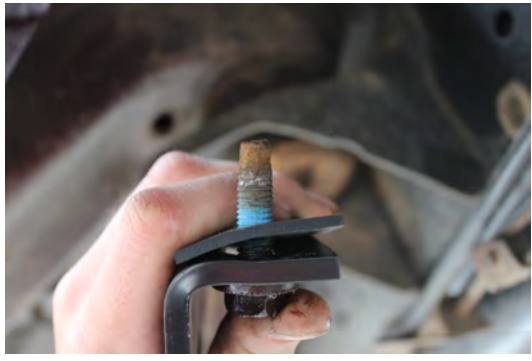


B. Secure FAB-1001 onto the FA assembly with supplied 1/4-20x0.75 bolts.

Note: Use of Anti-seize compound is highly recommended.



C. Install the 2 10-300 into the "T" & "E" ports. Torque to 20 ft./lbs. Connect the male end of the wire harness to the female electrical connector on the FASS pump. Reconnect the battery. Turn key to the "On" position. With the FASS pump on, squirt a liberal amount of WD-40 or other lubricant into the "T" port. This procedure will "wet" the Gerotor and allow for better suction during initial priming. **NOTE: 10-300 DOES NOT REQUIRE THREAD TAPE**

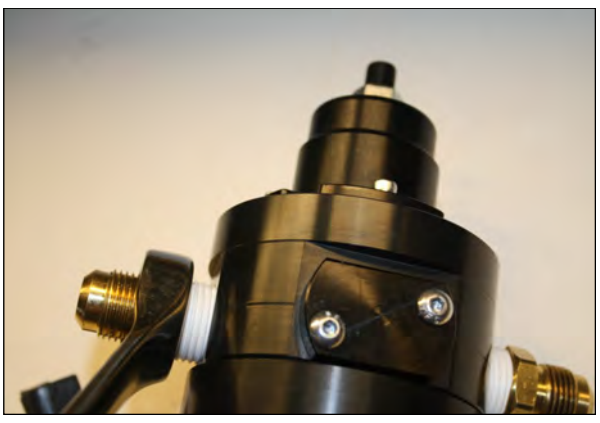


Before starting installation please review contents page to insure all necessary parts are included. Please call Diesel Performance Products for any missing or incorrect items. 636-433-5410

STEP 3: MOUNT FUEL PUMP

D. Install FA onto FPB-2005 using the 1/4-20x1.25 bolts and washers, be sure the weep hole facing down. Tighten mounting bolts to 110 in./lbs.



VERY IMPORTANT: REMEMBERING THE POSITION OF THE "T" PORT, THERE IS A SMALL WEEP HOLE IN THE BASE DIRECTLY NEXT TO THE ELECTRIC MOTOR, THIS HOLE MUST AIM DIRECTLY TO THE GROUND!! IMPROPER INSTALLATION OF THE PUMP CAN CAUSE PREMATURE WEAR AND VOID MANUFACTURES WARRANTY.

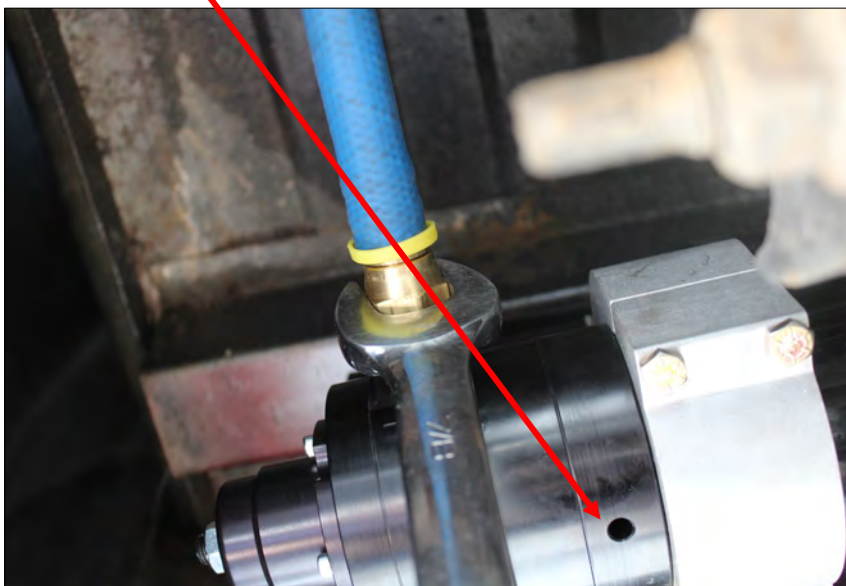


Before starting installation please review contents page to insure all necessary parts are included. Please call Diesel Performance Products for any missing or incorrect items. 636-433-5410

STEP 4: INSTALLING FUEL LINE

Do Not use sealant on AN (male flare) fittings.

- A. Route fuel line to the suction port on the FASS pump labeled "T". Cut the fuel line. Insert PL-1005 into fuel line using oil. Attach to 10-300 in 'T' port. Torque to 18 ft./lbs.

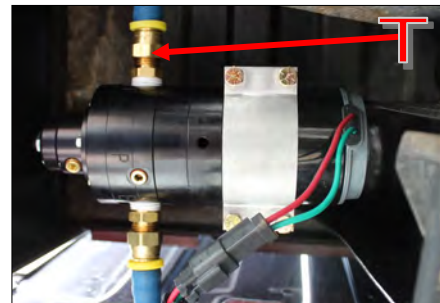


- B. Install in-line fuel filter in an accessible location in the suction line using the HC-1001's. Make sure the fuel flows in the direction of the arrow on the canister.



Note: Inline filter will need to be replaced every 6,000 miles.

- C. Insert PL-1005 into fuel line. Attach to 10-300 located in the port labeled "E". Use oil. Torque to 18 ft./lbs. Route this line to the inlet port of the factory filter housing.

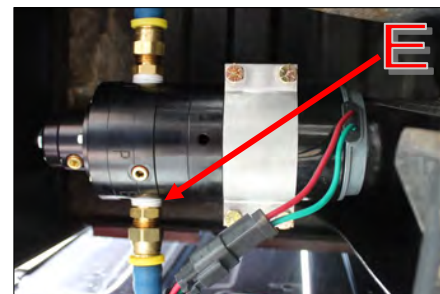

- D. Measure and cut fuel line. Insert PL-2003 90° Push-Lok fitting using oil.



- E. Disconnect factory fuel pump from the side of the factory fuel filter. Assemble the DIPF-1003 into the inlet side of fuel filter. Torque to 18ft/lbs.



- F. Connect the PL-2003 to the DIPF-1003. Torque to 18ft/lbs.



Note: Secure all fuel lines with cable ties. Cable ties are an economical way to prevent the possibility of problems occurring!

Before starting installation please review contents page to insure all necessary parts are included. Please call Diesel Performance Products for any missing or incorrect items. 636-433-5410

STEP 5: CHECK/SETTING PRESSURE

The preset pressure is approximately 15 psi. Follow these steps to check or reset the fuel pressure. The port with 1/8" Allen plug marked with the letter "P" is your fuel pressure port. **Exceeding factory fuel pressure may result in severe engine damage. Consult with engine manufacture before adjusting pressure!**

With the pump running –

- Loosen the lock nut
- Turn the adjustment screw clock wise to increase pressure and counter clock wise to decrease pressure.
- Once desired fuel pressure is obtained, tighten lock nut.

STEP 6: REVIEW INSTALLATION

- Blow out any open lines/cover any open ports
- Bolts and fasteners properly tightened?
- Electrical harness and fuel lines secured and properly tightened?
- Has the system been primed?
 1. Turn key to the ignition position, turning on the FASS pump for 15 sec..
 2. Crank engine and allow to run for at least 1 minute.
- Check for leaks.
- Start the engine
- Recheck all fluid and filter connections for leaks
- This pump comes with a 1 Year Manufacturer's Warranty based on the date it has been manufactured. To receive your extended Lifetime Warranty, you have 30 days from date of purchase to send the completed warranty information along with a copy of the purchase receipt in to Diesel Performance Products, Inc. Att: Warranty 16234 Hwy O Marthasville, MO 63357

LIMITATION OF LIFETIME WARRANTY

Disclaimer: To help insure you receive the proper system and customer support at the local level, FASS has a VIP and Authorized Dealer network representing FASS products. This is one reason you must purchase through a dealer to comply with our warranty policies. If you do not, there is no warranty! We recommend you go to www.FASSride.com, click "Find a Dealer", put in their ZIP code, select the type of dealer, and see if the company you purchased from is listed. If they are not, put their phone number in the field below the ZIP code field to see if they are listed. Below these two fields is a list of "Terminated/Unauthorized" dealers. You may want to review this list. If the company is not listed or is on the "Terminated/Unauthorized" list, we suggest you return the product immediately to that dealer and call FASS. We'll recommend you to the nearest dealer.

Diesel Performance Products, Inc. (hereafter "SELLER") gives Limited Warranty as to description, quality, merchantability, fitness for any product's purpose, productiveness, or any other matter of SELLER'S product sold herewith. The SELLER shall be in no way responsible for the product's open use and service and the BUYER hereby waives all rights other than those expressly written herein. This Warranty shall not be extended or varied except by a written instrument signed by SELLER and BUYER.

When MANUFACTURER receives the "ORIGINAL" PRODUCT REGISTRATION form with a copy of the "BILL OF SALE/SALES RECEIPT" within 30 days of the sale, then the following applies! The Warranty will then and only then be validated to that of which typically accompanies your unit for your specific application from the date of sale or for recommended service life and limited solely to the original purchaser and/or vehicle and parts contained within the product's kit. This warranty does not cover normal wear on consumable items such as but not limited to filters, fuel line, wire harness & etc. The warranty does not cover seized gears due to lack of filtration or fatty acid build up on the gears. Returned items will arrive prepaid to the place of purchase. Diesel Performance Products, Inc. will repair, without cost, any product found to be defective during the warranty period; parts only, or at its option, will replace such products in exchange for the product. Repair or replacements are warranted for the remainder of the original warranty period. All Warranty claims are subject to approval by Diesel Performance Products, Inc.

A Return Material Authorization (RMA) number must be obtained before any product is to be returned to Diesel Performance Products, Inc. for warranty consideration, repair or product return. Requests for product returns must be offset by an equal value order. Return parts must be completed and in resalable condition. No returns after 30 days.

The following information is required to obtain a RMA number before returning product:

Your Name, Address, and Phone Number's
Model and Serial Number (Not Motor Number) Example: Model HD Series, Serial: 00125966
VIN Number of Vehicle
Date of Purchase
Nature of Problem

RMA and Product Serial Number must be on all paperwork and correspondence. Failure to obtain the required information or paperwork will result in \$25.00/item penalty and delay or denial of any warranty claim.

Under no circumstances shall the SELLER and/or MANUFACTURER be liable for any labor charged or travel time incurred in diagnosis for defects, removal, or reinstallation of this product, or any other contingent expenses.

Under no circumstances shall the SELLER and/or MANUFACTURER be liable for any damage or expenses insured by reason of the use or sale of any such equipment. This warranty does not apply to products which Diesel Performance Products, Inc. has determined to have been misused or abused, improperly maintained by the user, or where the malfunction or defect can be attributed to the use of non-genuine Diesel Performance Products, Inc. parts.

IN THE EVENT THAT THE BUYER DOES NOT AGREE WITH THIS AGREEMENT: THE BUYER MAY PROMPTLY RETURN THIS PRODUCT, IN A NEW AND UNUSED CONDITION, WITH A DATED PROOF OF PURCHASE, TO THE PLACE OF PURCHASE WITHIN THIRTY (30) DAYS FROM DATE OF PURCHASE FOR A FULL REFUND LESS SHIPPING.

THE INSTALLATION OF THIS PRODUCT INDICATES THAT THE BUYER HAS READ AND UNDERSTANDS THIS AGREEMENT AND ACCEPTS ITS TERMS AND CONDITIONS.

Technical Support:

Diesel Performance Products, Inc.
16234 State Hwy O
Marthasville, MO 63357
636-433-5410

NOTES

NOTES