

AMP RESEARCH BED X-TENDER™ QUICK-MOUNT BRACKET INSTALLATION PART # 74608-01A Cut out supplied template and tape to the D niller on observe



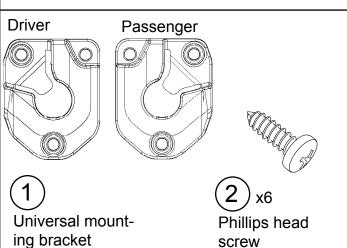

1S

Cut out supplied template and tape to the D-pillar as shown. Using a center punch, mark holes as specified by the template.

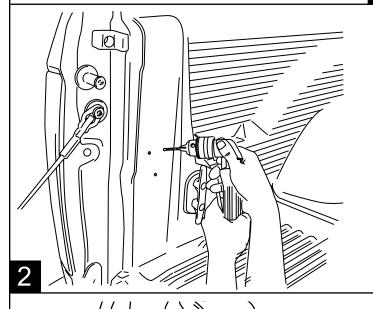

Using a power drill and 9/64" drill bit, drill through the sheet metal. If equipped with a bedliner, drill through bedliner.

Fasten mounting brackets using the supplied self-tapping Phillips screws and torque to 30 in. Ibs. If equipped with a bedliner, install mounting brackets over bedliner.

NOTE: If bedliner has contours that may prohibit a flat, solid mounting surface, cut out a rectangular section to clear the bracket and mount the bracket directly to the metal D-pillar.

www.amp-research.com

3