



## INSTALLATION MANUAL

### MODEL FP-100 & FP-150

*With New Quick Connect Components!*

# FORD POWERSTROKE 6.4L DIESEL ENGINE

PLEASE READ THESE INSTRUCTIONS THOROUGHLY  
BEFORE BEGINNING INSTALLATION!

## PureFlow AirDog

705 MAUSOLEUM ROAD  
SHELBYVILLE, IN 46176

1-877-421-3187



[www.pureflowairdog.com](http://www.pureflowairdog.com)

CANADIAN PATENT  
2,108,391

PROTECTED BY  
US PATENTS  
5,355,860; 5,746,184; 6,729,310

AUSTRALIAN PATENT  
2005101054

NEW ZEALAND PATENT  
532356

Additional Foreign Patents Pending in Europe, South America, Mexico, Japan, and China!

**Approved for Sale and Use in California by CARB!**



**SMALL and COMPACT**

**7" Long X 3.2" Wide X 10" Tall**

## OVERVIEW

### Welcome to **PureFlow® AirDog®** Fuel Air Separation, Filtration and Delivery System for the Diesel Engine

The AirDog® Fuel Air Separation system is a Premium lift pump and filtration system for the Ford PowerStroke 6.4L diesel engine. A complete installation kit is included.

The AirDog® delivers clean fuel to the engine free of virtually all air/vapor and at a positive flow. Thus, allowing the engine “test cell” performance and efficiency, while in “real world” use.

The AirDog® FP-100 flows 100 GPH and is recommended for stock and slightly modified PowerStroke Diesels.

The AirDog® FP-150 is recommended for highly modified PowerStroke Diesels.

PureFlow products are manufactured with a personal touch,  
unsurpassed attention to detail  
and  
the most stringent quality control!

### TYPICAL INSTALLATION LAYOUT

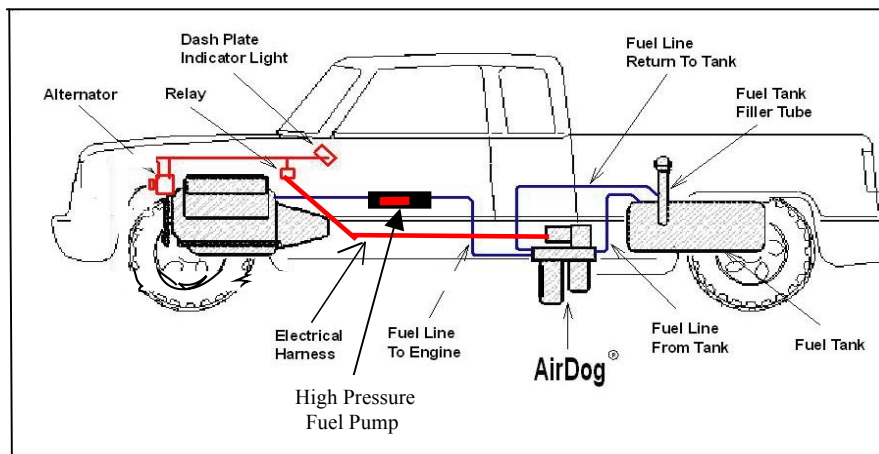


Figure 1

The AirDog® draws fuel from the fuel tank at a constant flow, removing water, particulates, and air/vapor while maintaining a regulated pressurized fuel flow to the stock OE high pressure pump. The air/vapor separated from the fuel by the AirDog® is returned to the fuel tank.

**NOTE:** The pictures used in this manual are for example only and may not be exactly the same as your truck.

## QUICK CONNECT COMPONENT OVERVIEW

Provided in this kit are two different OE style quick connection systems. These systems work together to allow for a quick, clean, and professional install.

### Jiffy Tite Quick Connect System

Jiffy Tite's patented quick connect system is used for the connections at the AirDog®. The images below show the flared formation of the Jiffy Tite System. Simply insert the male end form into the fitting and push firmly until you hear it "click" into place. To disconnect the system, use a Jiffy Tite tool similar to the image below. This tool can be purchased at your local auto parts store. Insert the tool into the connection and turn it ¼ turn to open the retaining spring. While the retaining spring is open, firmly pull the connection apart.



### SAE J2044 Quick Connect System

The SAE J2044 quick connect system is the most commonly used system in the automotive industry. The images below show the formation of SAE J2044 connection. To connect the assemblies, simply insert the male end form into the mating female connector. Push firmly until you hear it "click" into place. To disconnect the fittings, press down and hold the blue tabs on the female connector while you firmly pull the assembly apart.



# TABLE OF CONTENTS

Section 1.....Table of Contents  
Section 2.....Installation and Safety Guidelines  
Section 3.....Parts List

## INSTALLATION PROCEDURES

Section 4.....AirDog® & Mounting Brackets

### Fuel Lines

Section 5 A.....Fuel To Engine  
Section 5 B.....Fuel Return to Tank  
Section 5 C.....Suction line For FP-100  
Section 5 D.....Suction Line For FP-150  
(Includes Hi Flow Suction Tube)

### Electrical Harness

Section 6.....Electrical Harness  
Section 7.....Final Check List

### Maintenance

Section 8.....Filter Service Recommendations  
Section 9.....Cleaning the Gearotor Assembly

## AirDog® MODEL FP-100 & FP-150

The installation of your **AirDog®** can be made relatively easy by following the steps outlined in this manual, and:

1. Inventory the package components completely. Notify *PUREFLOW® AIRDOG* immediately of any parts missing or damaged.
2. Read the installation manual completely. Understand how the system operates and installation recommendations before beginning installation.
3. The installation recommendations contained herein are suggested installation guidelines only. Individual installations may vary.
4. If any installation procedure is uncertain, contact *PUREFLOW® AIRDOG* for technical assistance.
5. **When installing the AirDog® fuel lines be sure to keep the ORIGINAL ENGINE RETURN LINE connected as it is from the factory!**

## SAFETY GUIDELINES!

**CAUTION!** Please be sure to chock the vehicle's tires to prevent rolling.

**CAUTION!** Please use proper supports when working beneath an elevated vehicle.

**CAUTION!** Most diesel pickups have two (2) 12volt batteries. Disconnect the battery cables to both batteries before proceeding with the AirDog® installation.

**CAUTION!** Vehicle frame rails should not be drilled into or welded upon.

















**CAUTION!** Wear safety glasses when operating power tools such as drills and grinders or when using a punch or chisel.

**CAUTION!** Use common sense when routing fuel lines and electrical harnesses. Keep them away from hot exhaust components and/or moving parts. Properly secure lines to prevent chaffing.


Use Good Judgment and Common Sense When Installing the AirDog®!



**PowerStroke Parts List**

QTY	DESCRIPTION	Part Number	IMAGE
1	<b>Installation Manual</b>	ADI-F-100/150	
1	<b>AirDog®</b>	FP-100 Or FP-150	
1	<b>AirDog® Mounting Bracket</b>	001-3C-0004	
1	<b>Mounting Hardware Kit,</b>	901-61-0102-PM-F	
1	<b>Frame Bracket</b>	010-3C-0002PC 010-3C-0001PC	
1	<b>Wiring Harness</b>	5E-2-010	
1	<b>Return Fuel Filler Tube</b> (with 2 Clamps)	001-4A-1-0150	
1	<b>Bundle of Plastic Ties</b>	5H-2-1-06/12	
1	<b>High Flow Suction Tube</b> (For FP-150's Only)	WAP108	
1	<b>Grommet</b> (For FP-150's Only)	5J-1-1-04-0001	
1	<b>Spacer</b>	010-3C-0003-A-P	
1	<b>Suction Hose Assembly</b>	WAP110-8-8-90	
1	<b>Return Hose Assembly</b>	WAP107-8-8	
1	<b>Pressure Hose Assembly</b>	WAP121-8-8	
1	<b>Customer Service Oring Replacement Kit</b>	901-05-0101	
3	<b>Push Lock Hose Splice</b>	001-4A-1-0026	
2	<b>½" Female Jiffy Tite Quick Connect x 3/8" NPT</b>	95182	

## ILLUSTRATION OF QUICK CONNECT COMPONENTS

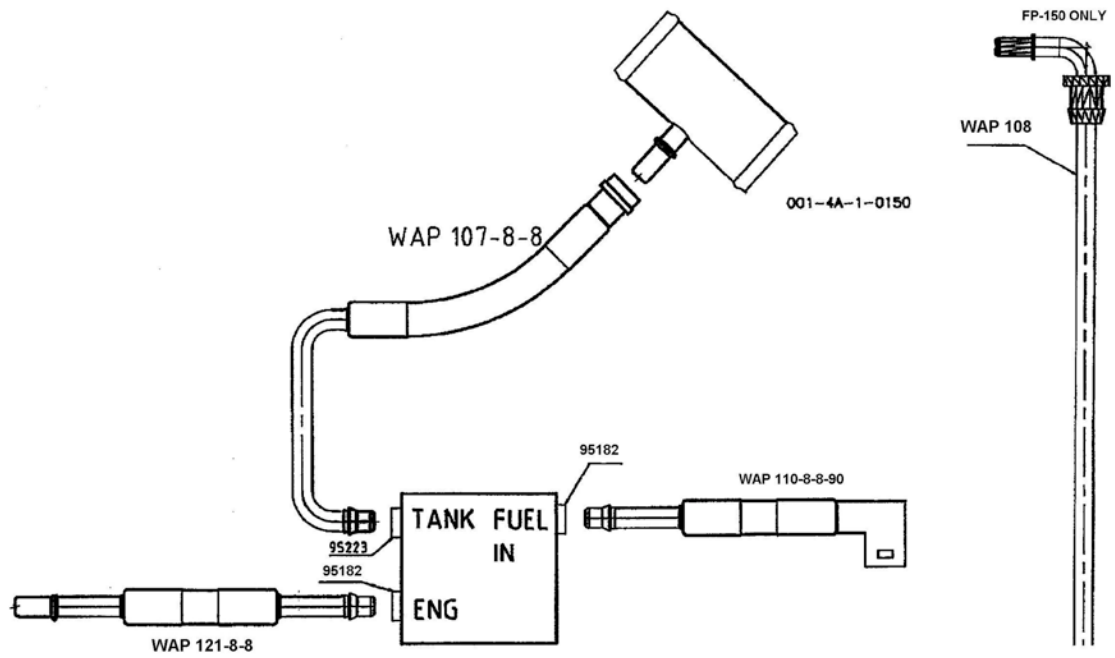



## Installing the AirDog® & Mounting Brackets on the Truck's Frame!



Figure 2



Figure 3



Figure 4

- 4-1. Assemble the AirDog® mounting bracket to the frame bracket. Use the spacer block to adjust the AirDog® to clear lines and wiring harnesses on the frame. Also adjust the assembly up or down on the frame bracket as needed for clearance.



Figure 5



Figure 6



Figure 7

- 4-2 Install a 3/8" NPT x 1/2" Jiffy Tite female quick connect (95182) into the "ENGINE" and "FUEL IN" ports in the AirDog®.



Figure 8

NOTE: The AirDog® can be mounted on either the inside or the outside of the frame, as space or personal choice dictates.

### Outside the Frame



Figure 9

### Inside the Frame



Figure 10

## **Installing the AirDog® & Mounting Brackets on the Truck's Frame, cont'd!**

NOTE: You may attach the AirDog® to the bracket either before or after attaching the assembly to the frame, whichever is easier. Mount the AirDog® so the 'FUEL IN' port is directed toward the rear of the vehicle.



Figure 11



Figure 12

- 4-3. Loosely assemble the AirDog® and brackets to the vehicle by clamping the frame between the mounting plate and back plate with bolts, lock washers, and nuts.




Figure 13

- 4-4. Position the AirDog® on the frame as necessary, for clearance. Properly torque the fasteners!


## **AirDog® II Fuel Line to the Engine!**

- 5A-1. Disconnect the fuel supply line to the engine from the OE fuel pump. This pump is located on the driver's side inside frame rail.

### **Fuel Pump with 1/2" Quick Connect Fitting**

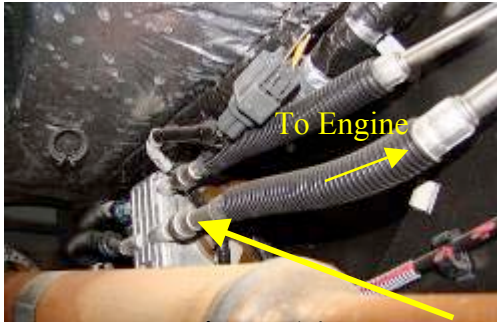

**Figure 14**  
**View from Front**

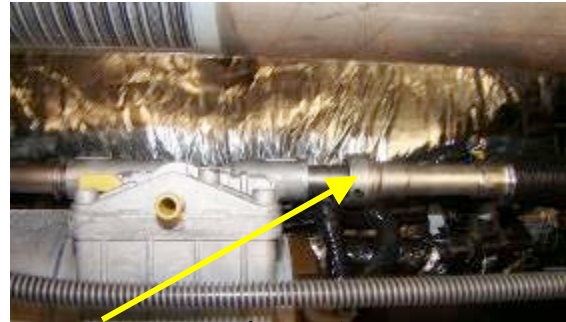

**Figure 15**  
**View From Below**

**DISCONNECT HERE**

- 5A-2 Insert the Jiffy Tite male quick connect end (see figure 16) of the “Pressure Hose Assembly” into the female quick connect fitting previously installed in the port marked “ENGINE”. You will hear a “click” when it connects.



**Figure 16**

- 5A-3. Connect the other end of the “Pressure Hose Assembly” (Figure 17) to The original factory engine supply line shown in figures 14 & 15. It will “click” when properly connected.



**Figure 17**

- 5A-4 Any excess fuel hose can be addressed by routing the hose in a fashion to take up the extra length, or a section of the hose can be removed. Push lock splices have been included if you choose to remove the excess hose.

## Fuel Return Line from the AirDog® to the Tank!

Installing the fuel 'Return to Tank' assembly in Filler Tube

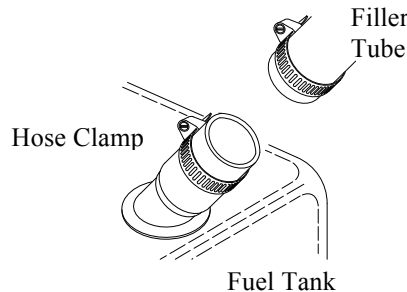


Figure 18

- 5B-1. Cut filler tube as illustrated, removing 1½ inches. Loose assemble clamps on each end of filler tube.



Figure 19



Figure 20

- 5B-2. Insert “Return Fuel Filler Tube” assembly in filler tube. **INSTALL THE FILLER TUBE WITH ARROWS POINTING TOWARD THE TANK!! SEE FIG 19** Properly tighten clamps.
- 5B-3. Insert the Jiffy Tite male quick connect end( see Figure 20) of the “Return Hose Assembly” into the pre installed female Jiffy Tite fitting in the port marked “Tank”. The fitting will “click” when properly installed.
- 5B-4. Attach the other end of the “Return Hose Assembly” onto the male end form of the “Return Fuel Filler Tube” installed in step 5B-2. A”click” will be heard when the fitting is properly connected.
- 5B-5. Any excess fuel hose can be addressed by routing the hose in a fashion to take up the extra length, or a section of the hose can be removed. Push lock splices have been included if you choose to remove the excess hose.

## **Section 5-C: Fuel Suction Line for AirDog® FP-100!**

**NOTE: The AirDog® FP-150 requires a High Flow Suction Tube. If you are installing an AirDog® FP-150 skip Section 5-C and go to Section 5D!**

- 5C-1. Insert the male Jiffy Tite quick connect end (see figure 21) of the “Suction Hose Assembly” to the female Jiffy Tite fitting install in the “Fuel In” port during step 4-3 of this manual. A “click” will be heard when the fitting is properly connected.



Figure 21

- 5C-2. Remove the original fuel suction line Quick Connect fitting from fuel tank by squeezing the tabs on the end of the connector together. Do Not mistake the return line with the suction line. Consult your factory manual if unsure of these procedures.



Figure 22

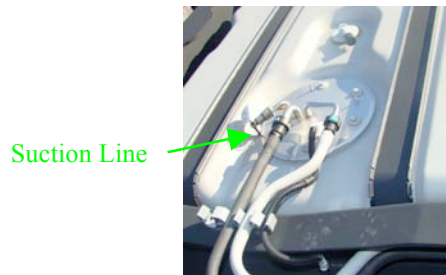


Figure 23

### **In More Detail**

To release the quick-connect fitting from the fuel tank suction tube, push the fitting toward the suction tube. With the plastic tabs firmly depressed, pull the fitting assembly from the suction tube. Hold the Quick Connect Fitting square to the suction tube. It may be difficult to disconnect the fitting it is cocked or becomes cocked during removal.

- 5C-3. Attach the other end of the “Suction Hose Assembly” to the male quick connect on the top of the fuel module where the factory suction line was once located. A “click will be heard when the assembly is properly connected. (Figure 23)
- 5C-4. Any excess fuel hose can be addressed by routing the hose in a fashion to take up the extra length, or a section of the hose can be removed. Push lock splices have been included if you choose to remove the excess hose.



## **INSTALLING THE AIRDOG® FP-150 HIGH FLOW SUCTION TUBE**

The AirDog® 150 includes a ½" *High Flow* suction tube to accommodate the high flows of this system. To install the ½ suction tube it is necessary to either drop the fuel tank or to lift the truck bed.

NOTE: Should you choose to drop the fuel tank, support the tank as it is when it is installed on the truck. If you let it rest flat on the floor, the tank may squash out and the suction tube will be too short after the tank is re-installed in the truck. The suction tube, being cut too short may suck air as the fuel drops below ¼ tank level.

NOTE: Should you choose to pull the pickup bed to access the tank. Be sure to disconnect the tail light wires, fuel tank filler tube, and any other accessories or components that may be secured to the frame and bed.

### **When Dropping the Tank, Always Remember Safety First!**



Figure 24



Figure 26



Figure 25

**If you choose to remove the bed, properly support the truck bed to prevent serious injury or death!**



Figure 27



Figure 28

## INSTALLING THE HIGH FLOW SUCTION TUBE, Cont'd

**NOTE:** The fuel tank used for the pictures is an example only and may not be exactly the same as your tank.

**IMPORTANT:** Select a location for the suction tube that has adequate clearance below the bed. Also consider that under hard acceleration, fuel will migrate toward the back of the fuel tank.

5D-1. Remove the collection basket.



Figure 29



Figure 30

5D-2. Drill a 1-1/8" hole at the selected location in the fuel tank for the suction tube. Hold a container below the drill point to catch debris.



Figure 31



Figure 32

5D-3. Remove all burrs from the edge of the hole.



Figure 33



Figure 34

5D-4. Install the grommet in the new suction tube access hole.



## INSTALLING THE HIGH FLOW SUCTION TUBE, Cont'd

- 5D-5. Measure and cut the suction tube to a length that will allow approximately 1/8" clearance off the bottom of the tank. It is suggested to form the end of the tube similar to Figure 38.



Figure 35

- 5D-6. Lubricate the bulkhead fitting with motor oil. Pressing firmly, insert the suction tube assembly into the grommet. Be sure the bulkhead fitting is completely seated in the grommet.



Figure 36



Figure 37

- 5D-7. Re-install the Collection basket.  
Re-install the factory return line to the proper port of the Collection basket before the tank is fully re-installed.



Figure 38

- 5D-8. Connect the end of the "Suction Hose Assembly" to the bulk head fitting while it is easily accessible. A "click" will be heard when it is properly installed.
- 5D-9 Any excess fuel hose can be addressed by routing the hose in a fashion to take up the extra length, or a section of the hose can be removed. Push lock splices have been included if you choose to remove the excess hose

## **INSTALLING THE HIGH FLOW SUCTION TUBE, Cont'd**

- 5D-10. If the fuel tank was dropped to install the suction tube, re-install the fuel tank.  
If the truck bed was removed, reinstall the bed.

**Section 6****Electrical Harness**

The *AirDog*® is equipped with a relay controlled wiring harness.

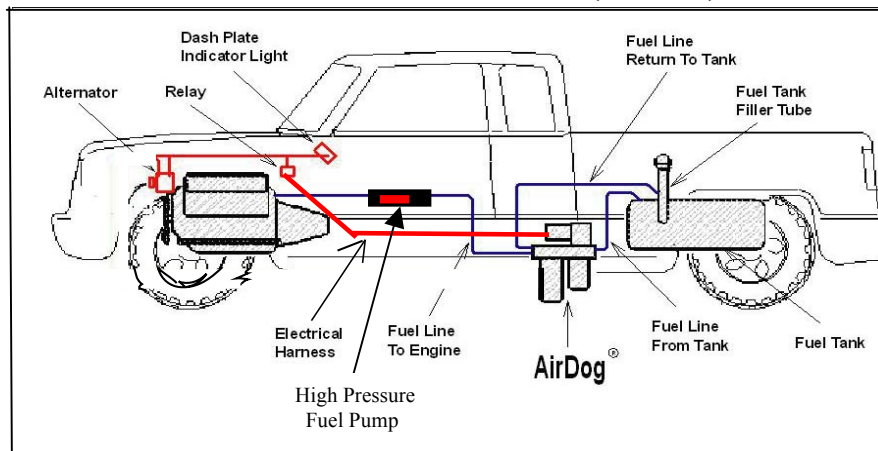
**WIRING DIAGRAM (In Red)**

Figure 39

**The AirDog® wiring harness!**

Figure 43

**CAUTION:** If the **OPTIONAL** Low Pressure Indicator Light is not used, be sure to insulate the two (2) #10 Indicator Light connectors to prevent accidental contact.

**Securing the Relay and Fuse Holder to the Vehicle**

6-1. Secure the relay and fuse holder to the vehicle.



Figure 40



Figure 41

## Connecting the AirDog® Relay Control Lead



Figure 42

- 6-3. Route the *AirDog*® 'Relay activation lead', the Red (+) wire with the mini fuse tap attached, to the OE fuel pump. Remove the mini fuse tap and splice the relay lead to the OE fuel pump lead.

**NOTE: The power supply leads can be connected to the battery or the alternator. Connecting the power supply leads to the alternator instead of the battery will create a corrosion free connection.**

- 6-4. Route the power supply leads to the alternator. Connect the Black (-) lead to the alternator *Ground* connection.

Connect the Red (+) lead to the alternator *Hot Lead* going to the battery.

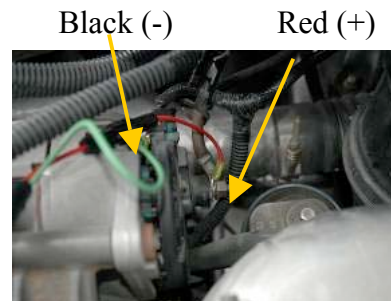


Figure 43

**OR**

- 6-5. Should you choose to connect the power supply leads directly to the battery, connect the RED (+) lead to the POSITIVE (+) post of the driver's side battery. Connect the BLACK (-) lead to the NEGATIVE (-) post of the same battery.

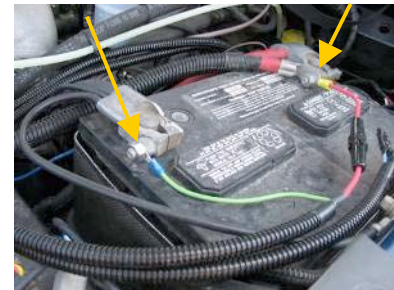


Figure 44

- 6-6. Route the wiring harness to the *AirDog*® and connect the 2 pin Deutsch connector to the corresponding connector on the *AirDog*®.



Figure 45

## INITIAL START PROCEDURE

The *AirDog*® is a self priming system, however, to prevent potential damage and reduce the life expectancy of the system, it is recommended to pre-fill only the water separator with diesel fuel before initial startup.

- 7-1. Pre-fill the water separator with diesel fuel.
- 7-2. Turn the starter key to the on/run position.
- 7-3. While the *AirDog*® is operating, bleed the fuel line to the engine of air by loosening the fuel line connection at the engine fitting. As soon as the line is purged of air and pure fuel is observed, properly tighten the fuel fitting. NOTE: put a rag or shop towel over and around fitting to prevent splatter. Catch all spilled fuel and dispose of properly.
- 7-4. Start engine!

**RECHECK ALL FUEL FITTINGS FOR LEAKAGE AND PROPERLY TORQUE. BE SURE ALL FUEL LINES ARE PROPERLY ROUTED TO PROTECT FROM EXCESSIVE HEAT AND SECURED TO PROTECT FROM CHAFFING AND ABRASION. RECHECK ALL ELECTRICAL LINES, SECURE AS NECESSARY.**


## Checking Pump Noise!

Note: Each AirDog® has been manufactured in a Quality Controlled process and wet tested for operation and performance before shipment. This is a very quiet and smooth running system. With fuel or air alone, the AirDog® fuel pump will run very quietly. However, if any fuel fitting on the vacuum side, between the fuel tank and the AirDog® or the water separator, has been left loose during the installation process, the system may suck air at an excessive rate and will be very noisy. To check for this problem, unscrew the water separator 3 or 4 full turns and activate the AirDog® by turning the ignition switch to on. If the AirDog® runs quietly, then excessive air from a loose fitting or leaking water separator seal is most likely the reason for the excessive noise. Correct as necessary.

- A. The seal groove in the 3" filter is a snug fit and on occasion the seal has been found to not be fully seated. Remove the water separator, remove the seal from the top of the nut plate. Clean and lubricate the seal groove. Carefully replace the seal in the groove. Be sure to fully seat the seal.
- B. Check all fittings, especially the quick connect at the tank.

## Filter Service Recommendations

Plugging of either the fuel filter, the screen in the water separator nipple or the water separator itself will cause low fuel pressure and flow to the engine. Should you experience low fuel pressure, first check the screen in the water separator nipple. If it is blocked by a film or debris, unscrew the nipple from the base, clean the screen, then re-install the nipple. If the screen is not restricted, check the water separator for plugging and restriction, then replace as necessary! If the low fuel pressure issue continues, replace the fuel filter.

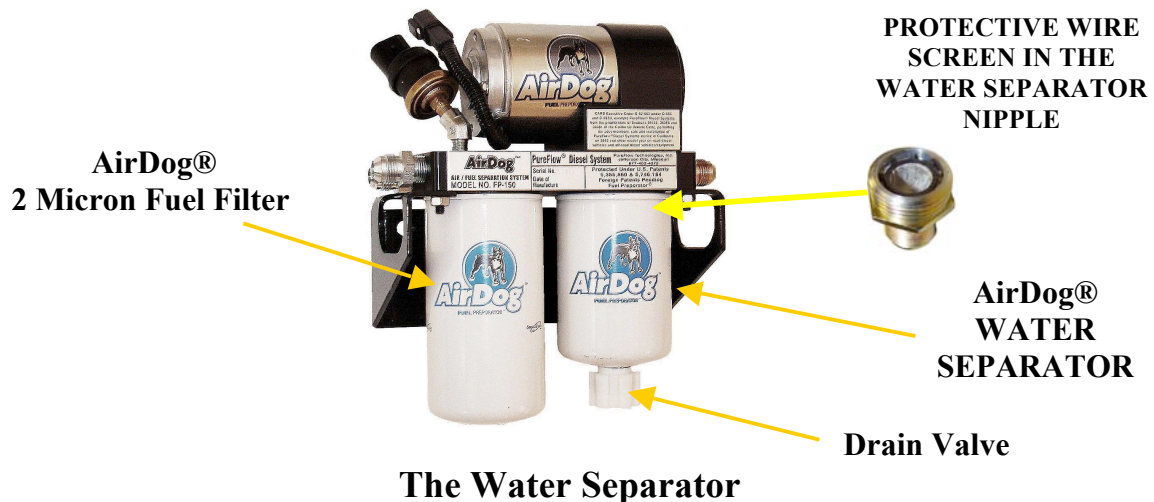

Replace the water separator every other time you change the Fuel Filter or if it becomes damaged or plugged. It is suggested to check/drain the water separator every three months or as needed should you experience excessive 'water in fuel' conditions. When installing the water separator, be sure to clean the under side of the AirDog® base. Follow the instructions printed on the pre-filter for proper tightening procedures.

**Caution:** Be extremely careful to prevent any contaminants or debris from entering the pre-filter when removing it for cleaning! Large debris will jam the Gerotor and cause the fuse to blow. This is not a warranty item. Should this happen, you can easily put the system back into working order. See the instructions on "How to clean the Gerotor" for proper procedures.

### The Fuel Filter

Remove the fuel filter by turning it counter clockwise. Do Not pre-fill the fuel filter with fuel. The AirDog® will fill the filter and prime the system automatically. Follow the instructions on the filter for proper tightening procedures.

**CAUTION:** Dispose of waste fuel and used filters properly to protect OUR environment!



## Cleaning Foreign Debris from the Gearotor Assembly

### Step 1

Remove the four (4) button head cap screws that secure the gearotor cap.



### Step 2

Carefully remove the O'ring, you will need to re-use it.



### Step 3

Remove and clean the gearotor. Be very careful not to damage the gearotor.




### Step 4

Clean the inside of the gearotor pocket.



### Step 5

Replace the O'ring and center gear.

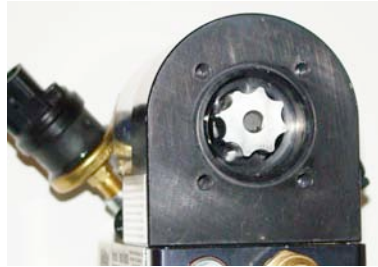


### Step 6

Align the teeth and install the outer gear.




### Step 7

Install the gearotor cap. Be very careful to index the cap to position the wide space between the half moon cuts to the bottom.

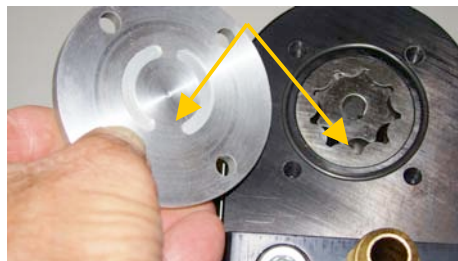

### Step 8

Replace the cap into position. Be very careful, do not pinch the O'ring. Torque the cap screws in an opposing pattern.

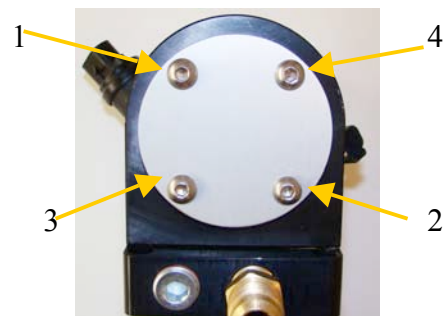



PUREFLOW AIRDOG  
***LIFETIME LIMITED EXPRESS WARRANTY***

FOR  
All PureFlow AirDog I, II and Raptor Systems

**IMPORTANT NOTICE**

**TO ACTIVATE YOUR PUREFLOW AIRDOG WARRANTY, YOU MUST COMPLETE AND MAIL YOUR WARRANTY CARD TO PUREFLOW AIRDOG WITH A COPY OF YOUR ORIGINAL SALES RECEIPT WITHIN 30 DAYS OF PURCHASE. FAILURE TO COMPLETE AND SUBMIT YOUR WARRANTY CARD WILL RESULT IN A WARRANTY PERIOD OF THE COVERED PRODUCT TO ONE (1) YEAR FROM THE DATE OF PURCHASE.**

PureFlow AirDog (hereafter collectively, “SELLER”) warrants and guarantees only to the Original Purchaser (hereafter collectively, BUYER) that All PureFlow AirDog Systems (hereafter collectively, PRODUCT) shall be free from defects of materials and workmanship in the manufacturing process for as long as the BUYER owns the PRODUCT.

The Lifetime Limited Express Warranty is limited to the PRODUCT purchased by the original BUYER of the PRODUCT and limited solely to the parts contained within the PRODUCT and EXCLUDES ALL ELSE INCLUDING FILTERS AND WATER SEPARATORS. Any PRODUCT that is in question of Warranty must be returned, shipped prepaid, to PureFlow AirDog. All Warranty claims are subject to the approval of PureFlow AirDog. If it is determined that a Warranty claim exists, PureFlow AirDog will, at its sole discretion, replace the defective PRODUCT with a comparable PRODUCT, repair the defective PRODUCT, or refund the BUYER’S purchase price in exchange for the PRODUCT. Repairs or replacements are warranted for only the remainder of the original warranty period and only to the original BUYER.

Under no circumstances shall the SELLER be liable for any labor charged or travel time incurred in the diagnosis for defects, removal, or reinstallation of the PRODUCT, or any contingent expense.

Under no circumstances will the SELLER be liable for any damage or expense incurred by reason of the use or sale of the PRODUCT.

Other than expressly set forth herein, the SELLER shall in no way be responsible for the proper or improper use and service of the PRODUCT. In no event shall the SELLER be liable for any special, incidental, indirect or consequential damages of any kind or nature, whether or not the BUYER of the PRODUCT was advised of the possibility of damage or harm, arising or resulting from the use or performance of the PRODUCT and BUYER hereby waives the right to any and all such claims.

BUYER, acknowledges that he/she is not relying on SELLER’S skill or judgment to select or furnish goods suitable for any particular purpose and that SELLER has no liability that will extend beyond the scope of the LIMITED EXPRESS WARRANTY contained herein, and BUYER hereby waives all remedies or liabilities, expressed or implied, arising by operation of law or otherwise.(including, without limitation, any obligation of SELLER with respect to fitness for any particular purpose; merchantability; and special, incidental, indirect or consequential damages) or whether or not occasioned by SELLER’S negligence.

SELLER disclaims any warranty and expressly disclaims any liability for personal injury or damages related to BUYER’S use of the PRODUCT. BUYER acknowledges and agrees that the disclaimer of any liability for personal injury is a material term for this agreement and BUYER agrees to indemnify SELLER and hold SELLER harmless from any claim related to the PRODUCT and its use or performance. Under no circumstances will SELLER be liable for any damages, liabilities, costs or expenses incurred as a result of or by reason of use, performance or sale of the PRODUCT, including without limitation, any damages, liabilities, costs or expenses incurred by reason of BUYER’S negligence related to those uses of the PRODUCT.

The proper installation of the PRODUCT is the sole responsibility of the BUYER. The SELLER assumes no liability regarding improper installation or misapplication of the PRODUCT.

SELLER hereby provides the following limited warranty as to description, quality, merchantability, fitness for the PRODUCT’S purpose, productiveness, or any other matter of SELLER’S PRODUCT sold herewith. The

SELLER shall be in no way responsible for the open use and service of the PRODUCT and the BUYER hereby waives all rights other than those expressly written herein. This Warranty shall not be extended or varied except by a written instrument signed by SELLER and BUYER.

IN THE EVENT THAT THE BUYER DOES NOT AGREE WITH THIS AGREEMENT, THE BUYER MAY PROMPTLY RETURN THE PRODUCT, IN A NEW AND UNUSED CONDITION, WITH A DATED PROOF OF PURCHASE, TO THE PLACE OF PURCHASE WITHIN THIRTY (30) DAYS FROM THE DATE OF PURCHASE FOR A FULL REFUND. THE BUYER AGREES THAT THE INSTALLATION OF THIS PRODUCT CONFIRMS THE BUYER HAS READ AND UNDERSTANDS THIS AGREEMENT AND ACCEPTS THE TERMS AND CONDITIONS OF THIS AGREEMENT.

## **Warranty Procedure**

In the unlikely event a warranty appears as if it may be warranted, the following steps are taken:

- 1 The customer discussed the symptoms of the problem with a PureFlow AirDog Technician. The customer is to have the system Serial Number and Model Number available for the Technician when the call is made. This will expedite all steps of the process.
- 2 The customer performs any and all tests requested by the PureFlow AirDog Technician. This is done to isolate the potential problem while eliminating potential installation or maintenance related issues,
- 3 If the PureFlow AirDog Technician determines based on the customer feedback concerning the requested testing that system may be at fault, the customer is advised that all returned pumps are tested upon arrival and should this returned pump perform at design criteria upon arrival, the customer will be charged a \$50.00 fee.
- 4 The PureFlow AirDog Technician will first request the customer's phone number in the event the phone call is accidentally disconnected and then transfer the customer to a PureFlow AirDog Customer Service Representative. Should a Customer Service Representative not be available, the Technician will offer the Customer the option to hold, call back, or receive a return call.
- 5 The PureFlow AirDog Customer Service Representative will check to determine if the customer's Warranty Registration Card is on file.
  - a. If no Warranty Registration is found, the customer will be required to supply the original purchase receipt showing the purchase date.
  - b. If no Warranty Registration is found, the customer will be advised of the options should the system in question is out of the default warranty period (1 year).
- 6 The PureFlow AirDog Customer Service Representative will request the customer information, including: Name, Address, Phone Number, Model Number, Serial Number, Year / Make / Model of vehicle, Name of Dealer purchased from, Purchase Date, Description of Problem, Customers' understanding of the resolution, and customer credit card information.
- 7 PureFlow AirDog will cover Ground Shipping charges to ship the replacement unit and will include a prepaid shipping label for the return of the defective unit. Any additional items ordered at the time of the replacement shipment will include their portion of the shipping cost.
- 8 A period of 15 Calendar Days from the time of shipment is provided for the receipt of the defective unit at the PureFlow AirDog facility. Failure to return ship the defective unit to arrive within the defined time period will result in a charge of \$250.00 against the customer's credit card as the purchase cost of the defective unit.